

## **Stainless Steel Cylinder**

## Series CJ5-S/Series CG5-S

Ø10, Ø16 Ø20, Ø25, Ø32, Ø40, Ø50, Ø63, Ø80,Ø100



For use in environments with water spray such as food processing machines

## **Stainless Steel Cylinder**

## Series CJ5-S/Series CG5-S


ø10, ø16

Ø20, Ø25, Ø32, Ø40, Ø50, Ø63, Ø80, Ø100


Uses grease for food processing machines that meets FDA (U.S. Food and Drug Administration) standards


The use of non-toxic additives allows confident use in equipment for **foods**, **beverages and medical products**, etc.

Special scraper (standard) – prevents water from entering the cylinder.

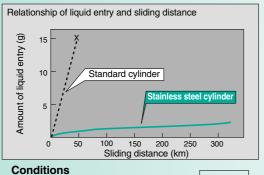

Working fluid ..... Air
Pressure ...... 0.5MPa
Liquid ...... Water-soluble coolant
Piston speed .... 200mm/sec (60cpm)

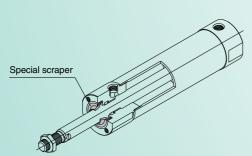

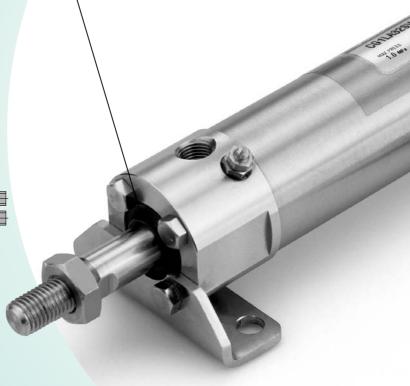

Two types of seal material

NBR or FKM can be selected to

(Nitrile rubber) (Fluoro rubber)

accommodate the application.

Can be disassembled (Series CG5-S)
Replacement of seals promotes an extended service life.

(Before disassembly, be sure to see the section regarding maintenance under "Specific Product Precautions" on page 32.)



# For use in environments with water spray such as food processing machines

All stainless steel specification (external parts)

**Stainless steel (SUS304)** is used for external metal parts. Corrosion resistance is improved even in environments with exposure to water.




## Exterior configuration reduces residual liquid

- Electropolishing of mounting bracket surfaces makes them smoother to prevent build-up of liquids and foreign matter.
- Plugs are provided for unused mounting threads (Series CG5-S) to prevent residue build-up in the threads.



#### **Series Variations**

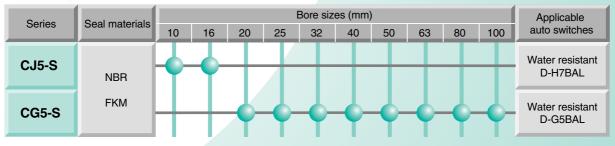


## Related Equipment

Water Resistant Air Cylinders ·····	····· P. 18
Speed Controller with One-touch Fittings/Stainless Steel Series AS-FG······	····· P. 20
One-touch Fittings/Stainless Steel Series KG·····	······ P. 21
Miniature Fittings MS	·····P. 25
Tubing <b>T, TU</b> ·····	····· P. 26
Floating Joint/Stainless Steel Type JS	P. 27



# Stainless Steel Cylinder Series CJ5-S ø10, ø16

## **How to Order**

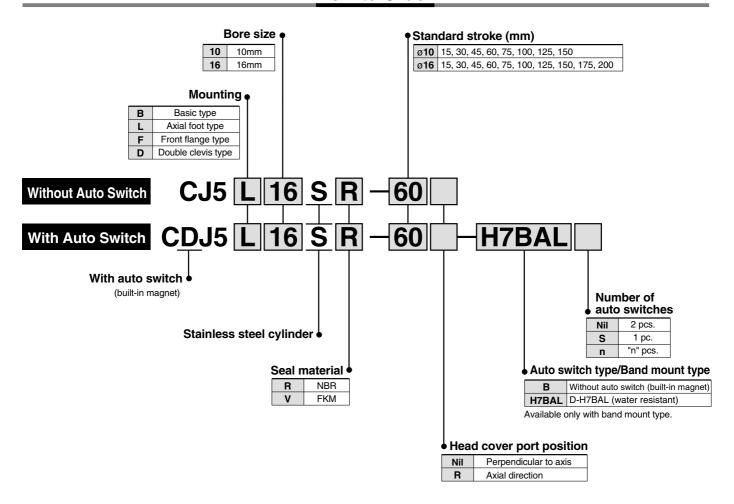

#### Mounting bracket part numbers

Mounting bracket	Bore siz	ze (mm)
Woulding bracket	10	16
Foot bracket	CJ-L016SUS	CJK-L016SUS
Flange bracket	CJ-F016SUS	CJK-F016SUS
T-bracket*	CJ-T010SUS	CJ-T016SUS

<sup>\*</sup> The T-bracket is applicable to the double clevis type (D).

## Auto switch mounting bracket part numbers (band mount type)

 
Bore size (mm)	Auto switch mounting bracket number	Note
10	BJ2-010S	Includes stainless steel
16	BJ2-016S	mounting screws

Grease pack for stainless steel cylinders/Part number: GR-R-010 (10q)

## **Auto switch specifications**

Refer to pages 15 through 17 for auto switch related items.

Tiefer to pages 13 through 17 for auto switch related items.												
D-H7BAL (with indicator light)/Band mount type												
Auto switch model	D-H7BAL											
Wiring type	2 wire											
Output type	_											
Applicable load	24VDC Relay, PLC											
Power supply voltage	_											
Current consumption	_											
Load voltage	24VDC (10 to 28VDC)											
Load current	5 to 40mA											
Internal voltage drop	4V or less											
Leakage current	0.8mA or less at 24VDC											
Indicator light	Actuated position											








## Stainless Steel Cylinder Series CJ5-S

## **Specifications**



 JIS symbol Double acting/Single rod



Action		Double acting single rod								
Fluid		Air								
Proof pressure		1 MPa								
Maximum operating press	ure	0.7MPa								
Minimum operating pressu	ıre	0.1MPa								
Ambient and fluid tempera	ture	Without auto switch: -10 to 70°C, With auto switch: -10 to 60°C								
Cushion		Rubber bumper								
Lubrication		Not required (non-lube)								
Thread tolerance		JIS class 2								
Stroke length tolerance		+1.0 0								
Piston speed		50 to 750mm/s								
Allewahle kinetie energy	ø <b>10</b>	0.035J								
Allowable kinetic energy	ø <b>16</b>	0.090J								
Mounting		Basic type, Axial foot type, Front flange type, Double clevis type								

## **Standard Strokes**

(mm)

Bore size	Standard stroke
10	15, 30, 45, 60, 75, 100, 125, 150
16	15, 30, 45, 60, 75, 100, 125, 150, 175, 200

## **Mounting Types and Accessories**

	Mounti	ing	Basic type	Axial foot type	Front flange type	Double clevis type*
ard	Mounting nut		•	•	•	_
Standard	Rod end nut		•	•	•	•
Sta	Clevis pin		_	_	_	•
	Single knuckle	joint	•	•	•	•
nal	Double knuckle	joint (with pin)*	•	•	•	•
Optional	T-bracket		_	_	_	•
0	Rod end cap	Flat type	•	•	•	•
	riou enu cap	Round type	•	•	•	•

<sup>\*</sup> Pin and snap ring are packed together with double clevis and double knuckle joint.

#### Weights (g)

	Bore size (mm)	10	16					
Standard	d weight*	52	96					
Addition	al weight per 15mm of stroke	4	6.5					
Mounting	Axial foot type	22	22					
bracket	Front flange type	16	16					
weight	Double clevis type (with pin)**							

<sup>\*</sup> The mounting nut and rod end nut are included in the basic weight.




<sup>\*\*</sup> The mounting nut is not included with the double clevis



## Series CJ5-S

## Construction (Cannot be disassembled)

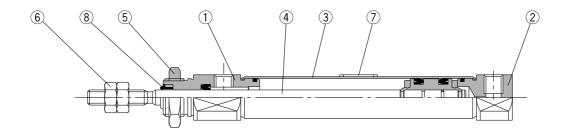

#### Parts list


No.	Description	Materia	al								
1	Rod cover	SUS304									
2	Head cover	SUS30	4								
3	Cylinder tube	SUS30	4								
4	Piston rod	SUS30	4								
5	Mounting nut	SUS30	4								
6	Rod end nut	SUS30	4								
7	Label protector	PET									
8	Water registent coroner	CJ5□□SR	NBR								
•	Water resistant scraper	CJ5□□SV	FKM								



## Stainless Steel Cylinder Series CJ5-S


## **Dimensions**

## Basic type (B)/C□J5B□S R V

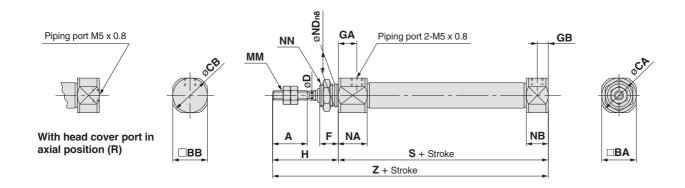

																(mn	n)
Bore size (mm)	Α	ВА	ВВ	CA	СВ	D	F	GA	GB	н	ММ	NN	NA	NB	ND <sub>n8</sub>	s	z
10	15	15	12	17	14	4	8	8	5	28	M4 x 0.7	M10 x 1.0	12.5	9.5	10 _0.022	46	74
16	15	18.3	18.3	20	20	5	8	8	5	28	M5 x 0.8	M12 x 1.0	12.5	9.5	12 _0.027	47	75

## Axial foot type (L)/C $\square$ J5L $\square$ S $_V^R$

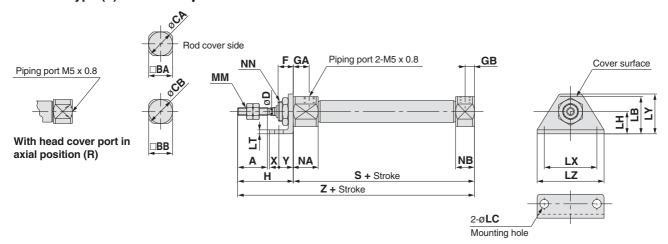


																								(111111)	/
Bore size (mm)	A	ВА	вв	CA	СВ	D	F	GA	GB	н	LB	LC	LH	LT	LX	LY	LZ	ММ	NN	NA	NB	s	х	Υ	z
10	15	15	12	17	14	4	8	8	5	28	21.5	5.5	14	2.5	33	25	42	M4 x 0.7	M10 x 1.0	12.5	9.5	46	6	9	74
16	15	18.3	18.3	20	20	5	8	8	5	28	23	5.5	14	2.5	33	25	42	M5 x 0.8	M12 x 1.0	12.5	9.5	47	6	9	75



## Series CJ5-S


## **Dimensions**

## Front flange type (F)/C $\square$ J5F $\square$ S $_{V}^{R}$

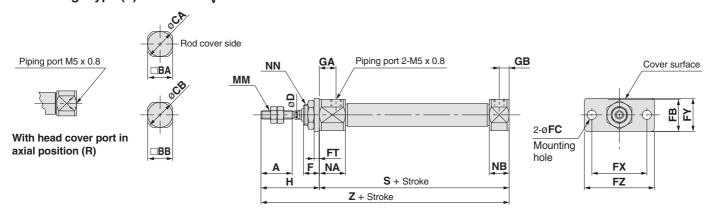

																						(mm	1)
В	ore size (mm)	A	ВА	ВВ	CA	СВ	D	F	FB	FC	FT	FX	FY	FZ	GA	GB	н	ММ	NN	NA	NB	s	Z
	10	15	15	12	17	14	4	8	17.5	5.5	2.5	33	20	42	8	5	28	M4 x 0.7	M10 x 1.0	12.5	9.5	46	74
	16	15	18.3	18.3	20	20	5	8	19	5.5	2.5	33	20	42	8	5	28	M5 x 0.8	M12 x 1.0	12.5	9.5	47	75

## Double clevis type (D)/C□J5D□S R v

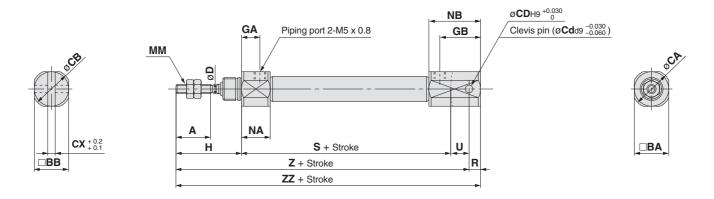

																			(mm)
Bore size (mm)	Α	ва	вв	CA	СВ	CD (Cd)	сх	D	GA	GB	Н	мм	NA	NB	R	s	U	z	ZZ
10	15	15	12	17	14	3.3	3.2	4	8	18	28	M4 x 0.7	12.5	22.5	5	46	8	82	87
16	15	18.3	18.3	20	20	5	6.5	5	8	23	28	M5 x 0.8	12.5	27.5	8	47	10	85	93


 $<sup>\</sup>ast$  Clevis pin and snap ring are packed together.



## Stainless Steel Cylinder Series CJ5-S


## **Accessory Dimensions**

#### Single knuckle joint

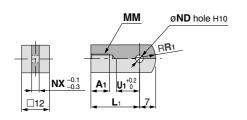


					Materia	al: S	SUS	304
Part no.	Applicable bore size (mm)	<b>A</b> 1	L1	ММ	<b>ND</b> H10	NX	R1	U1
I-J010SUS	10	8	21	M4 x 0.7	3.3 +0.048	3.1	8	9
I-J016SUS	16	8	25	M5 x 0.8	5 +0.048 0	6.4	12	14

#### Clevis pin

 

Material: Pin and snap ring both SUS304										
Part no.	Applicable bore size (mm)	<b>D</b> d9	d	L	e	m	t	Snap ring		
CD-J010	10	3.3 -0.030	3	15.2	12.2	1.2	0.3	C type 3.2		
CD-Z015SUS	16	5 -0.030 -0.060	4.8	22.7	18.3	1.5	0.7	C type 5		


#### Knuckle pin

 

N	Material: Pin and snap ring both SUS304										
Part no.	Applicable bore size (mm)	<b>D</b> d9	d	L	e	m	t	Snap ring			
CD-J010	10	3.3 -0.030	3	15.2	12.2	1.2	0.3	C type 3.2			
IY-J015SUS	16	5 <sup>-0.030</sup> -0.060	4.8	16.6	12.2	1.5	0.7	C type 5			

### Double knuckle joint

 
 $\ast$  Knuckle pin and snap ring are packed together.



Material: SUS304											
Part no.	Applicable bore size (mm)	<b>A</b> 1	L	L1	MM NDds						
Y-J010SUS	10	8	15.2	21	M4 x 0.7	3.3 -0.030 -0.060					
Y-J016SUS	16	11	16.6	21	M5 x 0.8	5 -0.030 -0.060					


Part no.	<b>ND</b> H10	NX	R1	U <sub>1</sub>
Y-J010SUS	3.3 <sup>+0.048</sup>	3.2	8	10
Y-J016SUS	5 <sup>+0.048</sup> <sub>0</sub>	6.5	12	10

#### **Mounting nut**

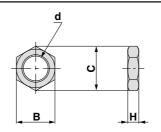


Material: SUS30										
Part no.	Applicable bore size (mm)	В	С	d	н					
SNJ-016SUS	10	14	16.2	M10 x 1.0	4					
SNKJ-016SUS	16	17	19.6	M12 x 1.0	4					

 Rod end nut




Material: SUS3									
Part no.	Applicable bore size (mm)	В	С	d	Н				
NTJ-010SUS	10	7	8.1	M4 x 0.7	3.2				
NTJ-015SUS	16	8	9.2	M5 x 0.8	4				

## T-bracket

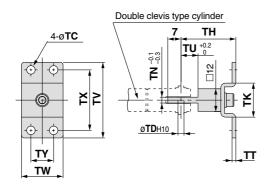


									М	ateria	ıl: SU	S304
Part no.	Applicable bore size (mm)	тс	<b>TD</b> H10	тн	тк	TN	тт	TU	TV	TW	тх	TY
CJ-T010SUS	10	4.5	3.3 +0.048	29	18	3.1	2	9	40	22	32	12
CJ-T016SUS	16	5.5	5 +0.048	35	20	6.4	2.5	14	48	28	38	16

#### Rod end cap

 



 

Material: POM											
Part no.		Applicable bore size		_		мм	N.	R	۱۸/		
Flat type	Round type	(mm)	A	ט	_	IVIIVI	N	ĸ	VV		
CJ-CF010	CJ-CR010	10	8	10	13	M4 x 0.7	6	10	8		
CJ-CF016	CJ-CR016	16	10	12	15	M5 x 0.8	7	12	10		






# **Stainless Steel Cylinder**

## Series CG5-S

Ø20, Ø25, Ø32, Ø40, Ø50, Ø63, Ø80, Ø100

## **How to Order**

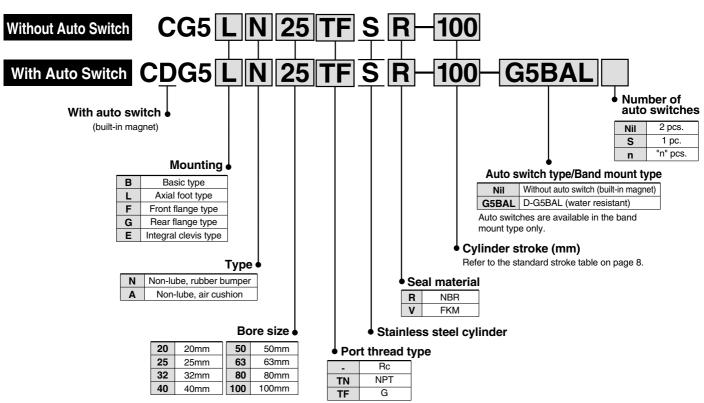

Bore size-Ø 20-25mm available in port thread M only for air

#### Mounting bracket part numbers

				Bore siz	ze (mm)			
Mounting bracket	20	25	32	40	50	63	80	100
Axial foot Note 1)	CG-L020SUS	CG-L025SUS	CG-L032SUS	CG-L040SUS	CG-L050SUS	CG-L063SUS	CG-L080SUS	CG-L100SUS
Flange	CG-F020SUS	CG-F025SUS	CG-F032SUS	CG-F040SUS	CG-F050SUS	CG-F063SUS	CG-F080SUS	CG-F100SUS
Trunnion bracket Note 2)	CG-E0	20SUS	CG-E0	32SUS	CG-E0	50SUS	CG-E0	80SUS

Note 1) Order two foot brackets for each cylinder.

Note 2) Includes clevis pin and snap ring

### Auto switch mounting bracket part numbers (band mount type)

Auto switch	Bore size (mm)										
model	20	20 25 32		40	50	63	80	100			
D-G5BAL	NBA- 088S		BGS1 -032S		BAF -05S	BAF -06S	BAF -08S	BAF -10S			

<sup>\*</sup> Includes stainless steel mounting screws.

Grease pack for stainless steel cylinders/Part number: GR-R-010 (10g)

#### **Auto switch specifications**

Refer to pages 15 through 17 for auto switch related items.

D-G5BAL (With ind	D-G5BAL (With indicator light)/Band mount type											
Auto switch model	D-G5BAL											
Wiring type	2 wire											
Output type	_											
Applicable load	24VDC relay, PLC											
Power supply voltage	_											
Current consumption	_											
Load voltage	24VDC (10 to 28VDC)											
Load current	5 to 40mA											
Internal voltage drop	4V or less											
Leakage current	0.8mA or less at 24VDC											
Indicator light	Actuated position Red LED lights up Optimum operating position Green LED lights up											



Use caution during operation as residue may collect on auto switches.





## Stainless Steel Cylinder Series CG5-S

## **Specifications**



JIS symbol
Double acting/Single rod



## Minimum stroke for mounting auto switches

Model	Number of a	uto switches
iviouei	2 pcs.	1 pc.
D-G5BAL	15mm	10mm

Refer to page 15 for details.

Astion		Devible esting single and						
Action		Double acting single rod						
Fluid		Air						
Proof pressure		1.5MPa						
Maximum operating pre	essure	1.0MPa						
Minimum operating pre	ssure	0.05MPa						
Ambient and fluid temp	erature	Nithout auto switch: -10 to 70°C, With auto switch: -10 to 60°						
Cushion		Rubber bumper, Air cushion						
Piston speed	ø <b>20 to</b> ø <b>63</b>	50 to 1000mm/s						
Pistoli speed	ø <b>80</b> , ø <b>100</b>	50 to 700mm/s						
Thread tolerance		JIS class 2						
a	ø <b>20 to</b> ø <b>63</b>	to 1000 <sup>+1.4</sup> mm, to 1200 <sup>+1.5</sup> mm						
Stroke length tolerance	ø <b>80</b> , ø <b>100</b>	to 1000 <sup>+1.4</sup> mm, to 1500 <sup>+1.5</sup> mm						
Mounting		Basic type, Axial foot type, Front flange type, Rear flange type, Integral clevis type						

## **Standard Strokes**

(mm)

Bore size	Standard stroke Note 1)	Long stroke
20	25, 50, 75, 100, 125, 150, 200	201 to 350
25		301 to 400
32		301 to 450
40	25, 50, 75, 100, 125, 150, 200, 250, 300	301 to 800
50, 63	25, 30, 75, 100, 125, 150, 200, 250, 500	301 to 1200
80		301 to 1400
100		301 to 1500

Note 1) All non-standard strokes are produced upon receipt of order. (Spacers are not used on intermediate strokes.)

## **Accessories**

	Mounting	Basic type	Axial foot type	Front flange type	Rear flange type	Integral clevis type
Standard	Rod end nut	•	•	•	•	•
	Single knuckle joint	•	•	•	•	•
Optional	Double knuckle joint (with pin & snap ring)	•	•	•	•	•
	Trunnion bracket (with pin & snap ring)	_	1	_	_	•

Weights (kg)

	Bore size	20	25	32	40	50	63	80	100
weight	Basic type	0.32	0.42	0.61	0.97	1.78	2.73	5.20	8.13
	Axial foot type	0.40	0.53	0.72	1.13	2.12	3.19	5.91	9.50
Standard	Flange type	0.43	0.53	0.71	1.12	2.04	3.25	5.86	9.29
Star	Integral clevis type	0.37	0.48	0.72	1.12	2.17	3.26	6.48	9.94
Tre	unnion bracket	0.08	0.08	0.18	0.18	0.46	0.46	1.65	1.65
Siı	ngle knuckle joint	0.04	0.07	0.07	0.11	0.22	0.22	0.53	0.78
Do	ouble knuckle joint (with pin)	0.05	0.09	0.09	0.18	0.33	0.33	0.73	1.07
Ad	ditional weight per 50mm of stroke	0.06	0.08	0.14	0.18	0.27	0.33	0.50	0.73
Ad	ditional weight with air cushion	0.02	0.02	0.03	0.02	0.06	0.07	0.14	0.16

Calculation (Example) CG5LA 20SR-100

(Foot type ø20, 100mm stroke)

- Basic weight ...... 0.40kg (Foot type ø20)
- Additional stroke weight ...... 0.06kg/50mm stroke
- Air cylinder stroke ......100mm
   Additional air cushion weight ..... 0.02kg
- Additional air cusnion weight ..... 0.028
   0.40 + 0.06 x 100/50 + 0.02 = 0.54kg






## Series CG5-S


## Construction


#### With rubber bumper

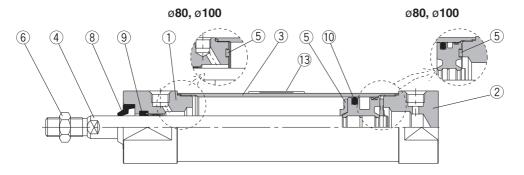



#### With air cushion

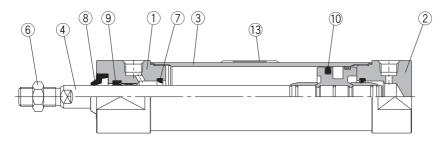

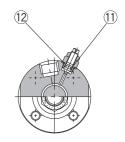

#### **Parts list**

No.	Description	Material
1	Rod cover	SUS304
2	Head cover	SUS304
3	Cylinder tube	SUS304
4	Piston rod	SUS304
5	Bumper	Urethane
6	Rod end nut	SUS304
7	Cushion seal	Urethane

No.	Description	Material								
INO.	Description	CG5□□□SR	CG5□□□SV							
8	Water resistant scraper									
9	Rod seal									
10	Piston seal	NBR	FKM							
11	Valve seal									
12	Valve retainer gasket									
13	Label protector	PI	ΞT							

Note) Magnets are installed on pistons of cylinders equipped with auto switches.

### Replacement parts: Seal kits Note)

Dava siza	Rubber b	oumper	Air cu	shion		
Bore size	CG5□N□SR	CG5□N□SV	CG5□A□SR	CG5□A□SV		
20	CG5N20SR-PS	CG5N20SV-PS	CG5A20SR-PS	CG5A20SV-PS		
25	CG5N25SR-PS	CG5N25SV-PS	CG5A25SR-PS	CG5A25SV-PS		
32	CG5N32SR-PS	CG5N32SV-PS	CG5A32SR-PS	CG5A32SV-PS CG5A40SV-PS		
40	CG5N40SR-PS	CG5N40SV-PS	CG5A40SR-PS			
50	CG5N50SR-PS	CG5N50SV-PS	CG5A50SR-PS	CG5A50SV-PS		
63	CG5N63SR-PS	CG5N63SV-PS	CG5A63SR-PS	CG5A63SV-PS		
80	CG5N80SR-PS	CG5N80SV-PS	CG5A80SR-PS	CG5A80SV-PS		
100 CG5N100SR-PS		CG5N100SV-PS	CG5A100SR-PS	CG5A100SV-PS		
Contents	Nos. 9 and	10 above	Nos. 9, 10, 11	and 12 above		

Note) A grease pack (GR-R-010, 10g) is included in seal kits.

## **⚠** Caution

When disassembling cylinders with bore sizes of ø20 through ø40, grip the double flat part of either the tube cover or the rod cover with a vise and loosen the other side with a wrench or a monkey wrench, etc., and then remove the cover. When retightening, tighten approximately 2 degrees more than the original position. (Cylinders with ø50 or larger bore sizes are tightened with a large tightening torque and cannot be disassembled.)




 


## Stainless Steel Cylinder Series CG5-S

## **Dimensions**

## Basic type (B)/C $\square$ G5BN $\square$ S $_{V}^{R}$ : With rubber bumper

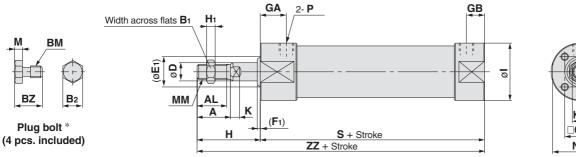




																												(mm)
Bore size	Stroke range	Rc,	NPT	port		G pc	ort	Α	AL	B <sub>1</sub>	B <sub>2</sub>	ВМ	ΒZ	С	D	E1	F1	н	H1	1	J	K	KA	М	ММ	NA	s	zz
(mm)	Standard	GA	GB	Р	GA	GB	Р																					
20	Up to 350	18	12	1/8	18	12	M5 x 0.8	18	15.5	13	7	M4 x 0.7	9	16.5	8	15	3	35	5	31	M4 x 0.7 depth 7	5	6	3	M8 x 1.25	29	83	118
25	Up to 400	18	12	1/8	18	12	M5 x 0.8	22	19.5	17	8	M5 x 0.8	9.5	18.5	10	17	3	40	6	33	M5 x 0.8 depth 8	5.5	8	3.5	M10 x 1.25	29	83	123
32	Up to 450	18	12	1/8	16	10	1/8	22	19.5	17	8	M5 x 0.8	9.5	20	12	19	3	40	6	38	M5 x 0.8 depth 8	5.5	10	3.5	M10 x 1.25	35.5	85	125
40	Up to 800	19	13	1/8	16	10	1/8	30	27	19	10	M6 x 1.0	12	26	16	23	3	50	8	47	M6 x 1.0 depth 12	6	14	4	M14 x 1.5	44	93	143
50	Up to 1200	21	14	1/4	19	12	1/4	35	32	27	13	M8 x 1.25	15.5	32	20	28	3	58	11	58	M8 x 1.25 depth 16	7	18	5.5	M18 x 1.5	55	109	167
63	Up to 1200	21	14	1/4	19	12	1/4	35	32	27	17	M10 x 1.5	19	38	20	28	3	58	11	72	M10 x 1.5 depth 16	7	18	7	M18 x 1.5	69	109	167
80	Up to 1400	28	20	3/8	25	17	3/8	40	37	32	17	M10 x 1.5	19	50	25	33	3	71	13	89	M10 x 1.5 depth 22	10	22	7	M22 x 1.5	80	130	201
100	Up to 1500	29	20	1/2	26	17	1/2	40	37	41	19	M12 x 1.75	24	60	30	38	3	71	16	110	M12 x 1.75 depth 23	10	26	8	M26 x 1.5	100	131	202

<sup>\*</sup> Install plug bolts, which are included, in any unused mounting holes.

## Basic type (B)/ $C \square G5BA \square S_V^R$ : With air cushion

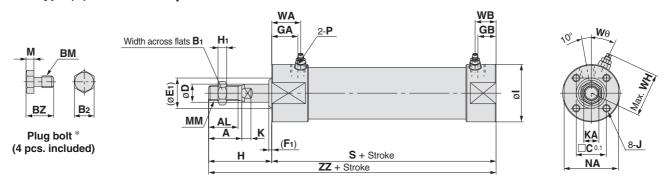

																										(	(mm)
Bore size	Stroke range	Ro	, NP	T port		G po	ort	Α	AL	B1	B <sub>2</sub>	вм	ΒZ	С	D	E1	F1	н	H1	1	J	K	KA	М	ММ	NA	s
(mm)	Standard	GA	GB	Р	GA	GB	Р																				
20	Up to 350	18	12	M5 x 0.8	18	12	M5 x 0.8	18	15.5	13	7	M4 x 0.7	9	16.5	8	15	3	35	5	31	M4 x 0.7 depth 7	5	6	3	M8 x 1.25	29	83
25	Up to 400	18	12	M5 x 0.8	18	12	M5 x 0.8	22	19.5	17	8	M5 x 0.8	9.5	18.5	10	17	3	40	6	33	M5 x 0.8 depth 8	5.5	8	3.5	M10 x 1.25	29	83
32	Up to 450	18	12	1/8	16	10	1/8	22	19.5	17	8	M5 x 0.8	9.5	20	12	19	3	40	6	38	M5 x 0.8 depth 8	5.5	10	3.5	M10 x 1.25	35.5	85
40	Up to 800	19	13	1/8	16	10	1/8	30	27	19	10	M6 x 1.0	12	26	16	23	3	50	8	47	M6 x 1.0 depth 12	6	14	4	M14 x 1.5	44	93
50	Up to 1200	21	14	1/4	19	12	1/4	35	32	27	13	M8 x 1.25	15.5	32	20	28	3	58	11	58	M8 x 1.25 depth 16	7	18	5.5	M18 x 1.5	55	109
63	Up to 1200	21	14	1/4	19	12	1/4	35	32	27	17	M10 x 1.5	19	38	20	28	3	58	11	72	M10 x 1.5 depth 16	7	18	7	M18 x 1.5	69	109
80	Up to 1400	28	20	3/8	25	17	3/8	40	37	32	17	M10 x 1.5	19	50	25	33	3	71	13	89	M10 x 1.5 depth 22	10	22	7	M22 x 1.5	80	130
100	Up to 1500	29	20	1/2	26	17	1/2	40	37	41	19	M12 x 1.75	24	60	30	38	3	71	16	110	M12 x 1.75 depth 23	10	26	8	M26 x 1.5	100	131

 $<sup>\</sup>ast$  Install plug bolts, which are included, in any unused mounting holes.

					(mm)
Bore size (mm)	WA	WB	WH	<b>W</b> θ	ZZ
20	22	16	23	30°	118
25	22	16	25	30°	123
32	22	16	28.5	25°	125
40	22	16	33	20°	143
50	25	18	40.5	20°	167
63	25	18	47.5	20°	167
80	30	22	60.5	20°	201
100	31	22	71	20°	202






## Series CG5-S

#### **Dimensions**

## Axial foot style (L): C□G5L A□S R

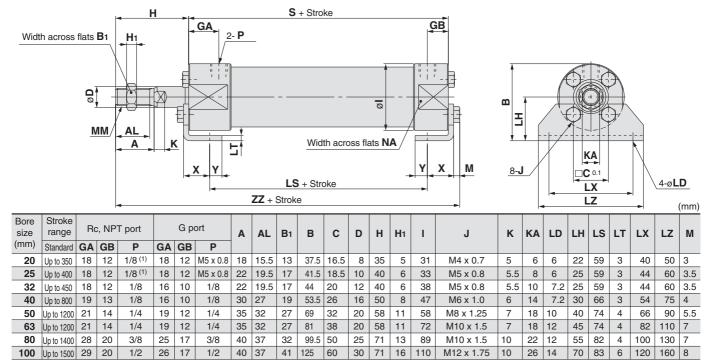


\* Foot brackets and plug bolts are installed when shipped from factory.


Note 1) ø20 and ø25 cylinders with an air cushion: M5 x 0.8

Note 2) Refer to the basic type (B)/CG5BA\subseteq S\* for the dimensions of air cushion needles.

						(111111)
Bore size (mm)	ММ	NA	s	X	Υ	ZZ
20	M8 x 1.25	29	83	15	7	124
25	M10 x 1.25	29	83	15	7	129.5
32	M10 x 1.25	35.5	85	16	6	131.5
40	M14 x 1.5	44	93	16.5	6.5	150
50	M18 x 1.5	55	109	21.5	11.5	176.5
63	M18 x 1.5	69	109	21.5	11.5	178
80	M22 x 1.5	80	130	28	17	212
100	M26 x 1.5	100	131	30	15	216

## Rod side flange style (F): $C \square G5F_A^N \square S_V^R$

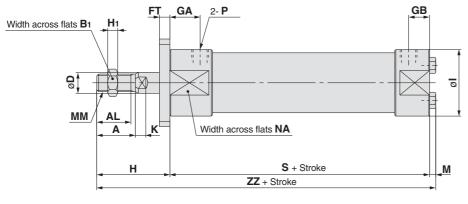

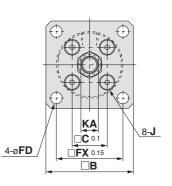

(mm)

Bore size	Stroke range	Rc	, NP	T port		Gp	ort	Α	AL	B <sub>1</sub>	В	С	D	FX	FD	FT	н	H1	ı	J	K	KA	М	ММ	NA	s	ZZ
(mm)	Standard	GA	GB	Р	GA	GB	Р																				
20	Up to 350	18	12	1/8 (1)	18	12	M5 x 0.8	18	15.5	13	50	16.5	8	36	5.5	6	35	5	31	M4 x 0.7	5	6	3	M8 x 1.25	29	83	121
25	Up to 400	18	12	1/8 (1)	18	12	M5 x 0.8	22	19.5	17	50	18.5	10	36	5.5	6	40	6	33	M5 x 0.8	5.5	8	3.5	M10 x 1.25	29	83	126.5
32	Up to 450	18	12	1/8	16	10	1/8	22	19.5	17	50	20	12	38	6.6	6	40	6	38	M5 x 0.8	5.5	10	3.5	M10 x 1.25	35.5	85	128.5
40	Up to 800	19	13	1/8	16	10	1/8	30	27	19	60	26	16	46	6.6	6	50	8	47	M6 x 1.0	6	14	4	M14 x 1.5	44	93	147
50	Up to 1200	21	14	1/4	19	12	1/4	35	32	27	75	32	20	58	9	9	58	11	58	M8 x 1.25	7	18	5.5	M18 x 1.5	55	109	172.5
63	Up to 1200	21	14	1/4	19	12	1/4	35	32	27	90	38	20	70	11	9	58	11	72	M10 x 1.5	7	18	7	M18 x 1.5	69	109	174
80	Up to 1400	28	20	3/8	25	17	3/8	40	37	32	100	50	25	82	11	9	71	13	89	M10 x 1.5	10	22	7	M22 x 1.5	80	130	208
100	Up to 1500	29	20	1/2	26	17	1/2	40	37	41	125	60	30	100	14	10	71	16	110	M12 x 1.75	10	26	8	M26 x 1.5	100	131	210

 $<sup>\</sup>ast$  Flange bracket and plug bolt are installed when shipped from factory.

Note 1)  $\emptyset$ 20 and  $\emptyset$ 25 cylinders with an air cushion: M5 x 0.8

Note 2) Refer to the basic type (B)/CG5BA S\* for the dimensions of air cushion needles.






## Stainless Steel Cylinder Series CG5-S

## **Dimensions**


## Head side flange style (G): $C \square G5G_A^N \square S_V^R$

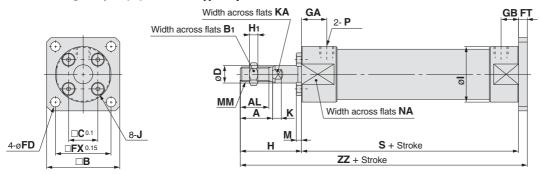

Bore size	Stroke range	Rc	, NPT	Γport		Gр	ort	Α	AL	B <sub>1</sub>	В	С	D	FX	FD	FT	н	H1	1	J	K	KA	М	ММ	NA	s	ZZ
(mm)	Standard	GA	GB	Р	GA	GB	Р																				
20	Up to 200	18	12	1/8 (1)	18	12	M5 x 0.8	18	15.5	13	50	16.5	8	36	5.5	6	35	5	31	M4 x 0.7	5	6	3	M8 x 1.25	29	83	124
25	Up to 300	18	12	1/8 (1)	18	12	M5 x 0.8	22	19.5	17	50	18.5	10	36	5.5	6	40	6	33	M5 x 0.8	5.5	8	3.5	M10 x 1.25	29	83	129
32	Up to 300	18	12	1/8	16	10	1/8	22	19.5	17	50	20	12	38	6.6	6	40	6	38	M5 x 0.8	5.5	10	3.5	M10 x 1.25	35.5	85	131
40	Up to 500	19	13	1/8	16	10	1/8	30	27	19	60	26	16	46	6.6	6	50	8	47	M6 x 1.0	6	14	4	M14 x 1.5	44	93	149
50	Up to 600	21	14	1/4	19	12	1/4	35	32	27	75	32	20	58	9	9	58	11	58	M8 x 1.25	7	18	5.5	M18 x 1.5	55	109	176
63	Up to 600	21	14	1/4	19	12	1/4	35	32	27	90	38	20	70	11	9	58	11	72	M10 x 1.5	7	18	7	M18 x 1.5	69	109	176
80	Up to 750	28	20	3/8	25	17	3/8	40	37	32	100	50	25	82	11	9	71	13	89	M10 x 1.5	10	22	7	M22 x 1.5	80	130	210
100	Up to 750	29	20	1/2	26	17	1/2	40	37	41	125	60	30	100	14	10	71	16	110	M12 x 1.75	10	26	8	M26 x 1.5	100	131	212

<sup>\*</sup> Foot brackets and plug bolts are installed when shipped from factory.

Note 1) ø20 and ø25 cylinders with an air cushion: M5 x 0.8 Note 2) Refer to the basic type (B)/CG5BA $\Box$ S\* for the dimensions of air cushion needles.

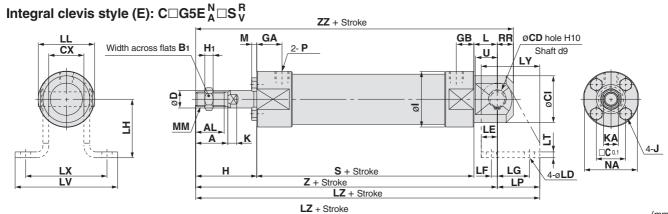

																									(mm)
Bore size	Stroke range	Ro	, NP	Γ port		Gр	ort	Α	AL	B1	С	CD(Hole)	CI	СХ	D	н	H1	1	J	K	KA	L	М	ММ	NA
(mm)	Standard	GA	GB	Р	GA	GB	Р																		
20	Up to 200	18	12	1/8 (1)	18	12	M5 x 0.8	18	15.5	13	16.5	8 +0.058	25	16 -0.2	8	35	5	31	M4 x 0.7	5	6	14	3	M8 x 1.25	29
25	Up to 300	18	12	1/8 (1)	18	12	M5 x 0.8	22	19.5	17	18.5	8 +0.058	27	16 -0.2	10	40	6	33	M5 x 0.8	5.5	8	14	3.5	M10 x 1.25	29
32	Up to 300	18	12	1/8	16	10	1/8	22	19.5	17	20	10 +0.058	32	24 -0.2	12	40	6	38	M5 x 0.8	5.5	10	16	3.5	M10 x 1.25	35.5
40	Up to 500	19	13	1/8	16	10	1/8	30	27	19	26	10 +0.058	40	24 -0.2	16	50	8	47	M6 x 1.0	6	14	16	4	M14 x 1.5	44
50	Up to 600	21	14	1/4	19	12	1/4	35	32	27	32	14 +0.070	50	40 -0.2	20	58	11	58	M8 x 1.25	7	18	22	5.5	M18 x 1.5	55
63	Up to 600	21	14	1/4	19	12	1/4	35	32	27	38	14 +0.070	60	40 -0.2	20	58	11	72	M10 x 1.5	7	18	22	7	M18 x 1.5	69
80	Up to 750	28	20	3/8	25	17	3/8	40	37	32	50	22 +0.084	75	60 -0.3	25	71	13	89	M10 x 1.5	10	22	33	7	M22 x 1.5	80
100	Up to 750	29	20	1/2	26	17	1/2	40	37	41	60	22 +0.084	90	60 -0.3	30	71	16	110	M12 x 1.75	10	26	33	8	M26 x 1.5	100

																			(mm)
Bore size (mm)	RR	S	U	Z	ZZ	Pivot bracket	CD(Shaft)	LD	LE	LF	LG	LH	LL	LP	LT	LV	LX	LY	LZ
20	9	83	13	132	101G-	E020SUS	8-0.040	7	9	2	14	30	27.6	21	3	56.5	42	30	153
25	9	83	13	137	136-	E020SUS	8-0.040	7	9	2	14	30	27.6	21	3	56.5	42	30	158
32	11	85	15	141	152-	E032SUS	10-0.040	7	11	4	22	40	38.4	29	4	70.5	56	40	170
40	11	93	15	159	17'G-	E032SUS	10-0.040	7	11	4	22	40	38.4	29	4	70.5	56	40	188
50	15	109	21	189	2004-	E050SUS	14-0.050	12	15	5	25	50	59.6	35	6	106.5	84	50	224
63	15	109	21	189	2004-		14 <sup>-0.050</sup> <sub>-0.093</sub>	12	15	5	25	50	59.6	35	6	106.5	84	50	224
80	23	130	32	234	25%-	E080SUS	22-0.065	14	23	6	40	80	87.2	57	9	144.5	120	80	291
100	23	131	32	235	258-	E080SUS	22 <sup>-0.065</sup> -0.117	14	23	6	40	80	87.2	57	9	144.5	120	80	292

<sup>\*</sup> Plug bolts are installed when shipped from factory.

(mm)

<sup>\*</sup> Pivot bracket (with clevis pin and snap ring) are optional. (Not included.)

Note 1) ø20 and ø25 cylinders with an air cushion: M5 x 0.8


Note 2) Refer to the basic type (B)/CG5BA\( \subseteq S\* for the dimensions of air cushion needles.



## Series CG5-S

## **Accessory Dimensions**


#### Single knuckle joint

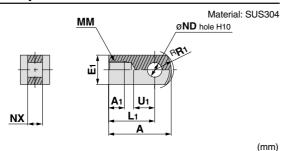

Part no.	Applicable bore size (mm)	A	<b>A</b> 1	E <sub>1</sub>	L <sub>1</sub>	ММ	<b>ND</b> H10	NX	R1	U1
I-G02SUS	20	34	8.5	□16	25	M8 x 1.25	8 +0.058		10.3	11.5
I-G03SUS	25, 32	41	10.5	□20	30	M10 x 1.25	10 +0.058	10 -0.2	12.8	14
I-G04SUS	40	42	14	□22	30		10 +0.058		12	14
I-G05SUS	50, 63	56	18	□28	40		14 +0.070		16	20
I-G08SUS	80	71	21	□38	50	M22 x 1.5	18 <sup>+0.070</sup>	28 -0.3	21	27
I-G10SUS	100	79	21	□45	55	M26 x 1.5	22 +0.084	32 <sup>-0.3</sup> <sub>-0.5</sub>	24	31

### Knuckle joint pin

 
Material: SUS440 (pin) SUS304 (snap ring)



								(mm)
Part no.	Applicable bore size (mm)	<b>D</b> d9	d	L	e	m	t	Snap ring
IY-G02SUS	20	8 <sup>-0.040</sup> -0.076	7.6	21	16.2	1.5	0.9	C type 8 for shaft
IY-G03SUS	25, 32	10 -0.040 -0.076	9.6	25.6	20.2	1.55	1.15	C type 10 for shaft
IY-G04SUS	40	10 -0.040 -0.076	9.6	41.6	36.2	1.55	1.15	C type 10 for shaft
IY-G05SUS	50, 63	14 <sup>-0.050</sup> <sub>-0.093</sub>	13.4	50.6	44.2	2.05	1.15	C type 14 for shaft
IY-G08SUS	80	18 <sup>-0.050</sup> <sub>-0.093</sub>	17	64	56.2	2.55	1.35	C type 18 for shaft
IY-G10SUS	100	22 <sup>-0.065</sup> -0.117	21	72	64.2	2.55	1.35	C type 22 for shaft


#### Clevis pin

 Material: SUS440 (pin) SUS304 (snap ring)




								(11111)
Part no.	Applicable bore size (mm)	<b>D</b> d9	d	L	e	m	t	Snap ring
CD-E02SUS	20, 25	ø8 <sup>-0.040</sup> -0.076	7.6	27.6	22.8	1.5	0.9	C type 8 for shaft
CD-E03SUS	32, 40	ø10 <sup>-0.040</sup> -0.076	9.6	38.4	33	1.55	1.15	C type 10 for shaft
CD-E05SUS	50, 63	ø14 <sup>-0.050</sup> -0.093	13.4	59.6	53.2	2.05	1.15	C type 14 for shaft
CD-E08SUS	80, 100	ø22 <sup>-0.065</sup> -0.117	21	87.2	79.4	2.55	1.35	C type 22 for shaft

#### Double knuckle joint

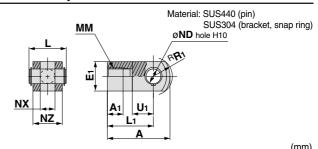


													(111111)
Part no.	Applicable bore size (mm)	A	<b>A</b> 1	E1	L	L <sub>1</sub>		<b>ND</b> H10		ΝZ	R1	U1	Applicable pin no.
Y-G02SUS	20	34	8.5	16	21	25		8 +0.058		16	10.3	11.5	IY-G02SUS
Y-G03SUS	25,32	41	10.5	20	25.6	30		10 +0.058		20	12.8	14	IY-G03SUS
Y-G04SUS	40	42	16	22	41.6	30	M14 x 1.5	10 +0.058			12	14	IY-G04SUS
Y-G05SUS	50,63	56	20	25	50.6	40	M18 x 1.5		70.0	44	16	20	IY-G05SUS
Y-G08SUS	80	71	23	35	64	50	M22 x 1.5	18 <sup>+0.070</sup>	28 +0.5	56	21	27	IY-G08SUS
Y-G10SUS	100	79	24	40	72	55	M26 x 1.5	22 +0.084	$32^{+0.5}_{+0.3}$	64	24	31	IY-G10SUS

#### **Trunnion bracket**

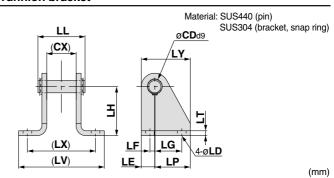

Part no.	Applicable bore size (mm)	CD (snap ring)		LD	LE	LF	LG	LH	LL	LP	LT	LV	LX	LY
CG-E020SUS	20, 25	8 <sup>-0.040</sup> -0.076	16	7	9	2	14	30	27.6	21	3	56.5	42	30
CG-E032SUS	32, 40	10 -0.040	24	7	11	4	22	40	38.4	29	4	70.5	56	40
CG-E050SUS	,	14 -0.050	40	12	15	5	25	50	59.6	35	6	106.5	84	50
CG-E080SUS	80, 100	22 <sup>-0.065</sup> -0.117	60	14	23	6	40	80	87.2	57	9	144.5	120	80

#### Rod end nut

 

Material: SUS304

						(mm)
Part no.	Applicable bore size (mm)	B <sub>1</sub>	С	D	d	Hı
NT-02SUS	20	13	(15)	12.5	M8 x 1.25	5
NT-03SUS	25, 32	17	(19.6)	16.5	M10 x 1.25	6
NT-G04SUS	40	19	(21.9)	18	M14 x 1.5	8
NT-05SUS	50, 63	27	(31.2)	26	M18 x 1.5	11
NT-08SUS	80	32	(37.0)	31	M22 x 1.5	13
NT-10SUS	100	41	(47.3)	39	M26 x 1.5	16



(mm)



## Series CJ5-S/CG5-S

## **Auto Switch Specifications**

#### **Auto Switch Common Specifications**

Туре	Solid State Switch
Operating time	1ms or less
Impact resistance	1000m/s²
Insulation resistance	$50 \text{M}\Omega$ or more at 500VDC (between lead wire and case)
Withstand voltage	1000VAC for 1 min. (between lead wire and case)
Ambient temperature	−10 to 60°C
Enclosure	IEC529 standard IP67, JISC0920 watertight construction

#### **Lead Wire Length**

The standard lead wire length for water resistant 2 colour indication solid state auto switches is 3 meters. (0.5m is not available.)

For solid state switches with flexible specification, enter "-61" after the lead wire length.



### **Lead Wire Colour Changes**


#### 2 wire

	Old	New
Output (+)	Red	Brown
Output (–)	Black	Blue

Lead wire colours of SMC switches have been changed as shown below in order to meet NECA Standard 0402 for production beginning September, 1996 and thereafter.

Special care should be taken regarding wire polarity during the time that the old colours still coexist with the new colours.

## **Auto Switch Mounting Positions and Minimum Mountable Strokes**

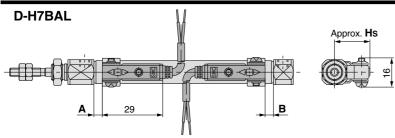


#### Minimum strokes for auto switch mounting

	o ioi dato omitori illo		
Mounting bracket	Basic type, Foot type, Flange type, Clevis type		
Number of switches	1 pc. (Rod cover side)	2 pcs. (Different sides)	2 pcs. (Same side)
Mounting surface	Port surface	Port surface	Port surface
Switch type			
Minimum stroke (mm)	10	15	60

#### Auto switch mounting positions

rate emiter:	mounting p	5001110	,,,,	(111111)
Applicable	Auto switch	D	L	
Applicable bore size (mm)	model	Α	В	HS
10		0	0	17
16		0.5	0.5	20.5
 
#### **D-G5BAL**



#### Minimum etrokee for auto ewitch mounting

winimum stroke	s for auto switch mo	unting	
Mounting bracket	Basic type	, Foot type, Flange type, C	levis type
Number of switches	1 pc. (Rod cover side)	2 pcs. (Different sides)	2 pcs. (Same side)
Mounting	Port surface	Port surface	Port surface
surface Switch type			
Minimum stroke (mm)	10	15	75

Auto switch mounting position (mm)				
Applicable Auto switch	D	-G5BA	L	
bore size (mm) model	Α	В	HS	
20	31.5	24	26	
25	31.5	24	28.5	
32	32.5	25	33	
40	37	28	36.5	
50	45.5	36	42	
63	45.5	36	48.5	
80	56	46	57.5	
100	57	46	68	



# Water Resistant 2 Colour Indication Solid State Switch Band Mount Type D-H7BAL

#### Grommet

#### Water (coolant) resistant type






## **Operating Precaution**

Consult SMC if a solution other than water is to be used.

## **Auto Switch Internal Circuits**

Lead wire colors inside [ ] are those prior to conformity with IEC standards.

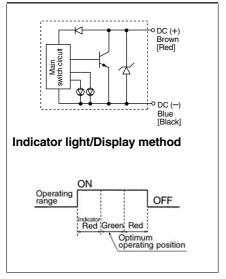


## **Auto switch specifications**

D-H7BAL (with indicator light)		
Auto switch part no.	D-H7BAL	
Wiring type	2 wire	
Output type	_	
Applicable load	24VDC relay, PLC	
Power supply voltage	_	
Current consumption	_	
Load voltage	24VDC (10 to 28VDC)	
Load current	5 to 40mA	
Internal voltage drop	4V or less	
Leakage current	0.8mA or less at 24VDC	
Indicator light	Actuated positionRed LED lights up Optimum operating position Green LED lights up	

<sup>•</sup> Lead wire — Oil resistant heavy duty vinyl cord, ø3, 4, 0.2mm², 2 cores (brown, blue [red, black]), 3m (standard) Note 1) Refer to page 15 for auto switch common specifications.

## **Most Sensitive Position**

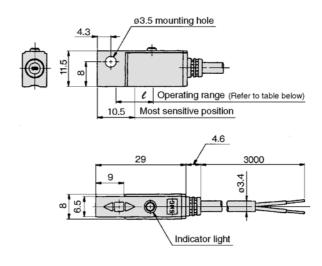

		(mm)
Bore size (mm)	10	16
Operating range (ℓ)	5	5

Note 2) Refer to page 15 for lead wire length.

# Water Resistant 2 Colour Indication Solid State Switch Band Mount Type

## **D-G5BAL**

#### Grommet

#### Water (coolant) resistant type






### **Operating Precaution**

Consult SMC if a solution other than water is to be used.

## **Auto Switch Internal Circuits**

Lead wire colors inside [ ] are those prior to conformity with IEC standards.

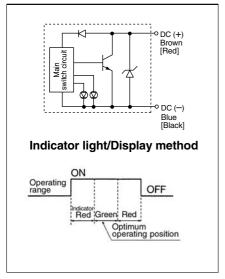



## **Auto switch specifications**

D-G5BAL (with indicate	G5BAL (with indicator light)		
Auto switch part no.	D-G5BAL		
Wiring type	2 wire		
Output type	_		
Applicable load	24VDC relay, PLC		
Power supply voltage	_		
<b>Current consumption</b>	_		
Load voltage	24VDC (10 to 28VDC)		
Load current	5 to 40mA		
Internal voltage drop	4V or less		
Leakage current	0.8mA or less at 24VDC		
Indicator light	Actuated positionRed LED lights up Optimum operating position Green LED lights up		

<sup>\*</sup> Lead wire —— Oil resistant heavy duty vinyl cord, ø4, 0.3mm², 2 cores (brown, blue [red, black]), 3m (standard) Note 1) Refer to page 15 for auto switch common specifications.
 
## **Most Sensitive Position**

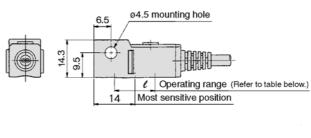




								(mm)
Bore size (mm)	20	25	32	40	50	63	80	100
Operating range (ℓ)	5	5	5.5	6	7	7.5	7.5	8

Note 2) Refer to page 15 for lead wire length.



# Related Equipment Water Resistant Air Cylinder

- For use in environments with water spray such as food processing machines and car wash machines
- Special scraper
  - Dramatically improved water resistance compared to standard cylinders

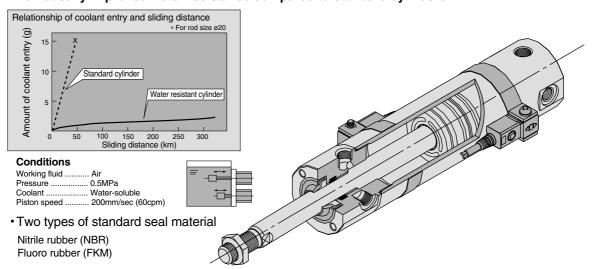





#### **Specifications**

Action	Double acting single rod
Bore size (mm)	ø20, ø25, ø32, ø40
Cushion	Rubber bumper
Switch mounting type	Band mount type
Made to order	Piston rod/Rod end nut material: Stainless steel (-XC6)


<sup>\*</sup> Specifications other than above are identical to the standard basic type

#### **Specifications**


•	
Action	Double acting single rod
Bore size (mm)	ø32, ø40, ø50, ø63, ø80, ø100
Cushion	Rubber bumper, Air cushion
Switch mounting type	Band mount type
Made to order	Piston rod/Rod end nut material: Stainless steel (-XC6)

<sup>\*</sup> Specifications other than above are identical to the standard basic type.

### **How to Order**

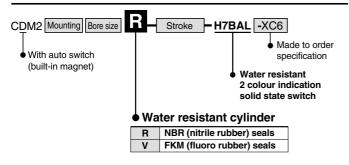

#### **How to Order**

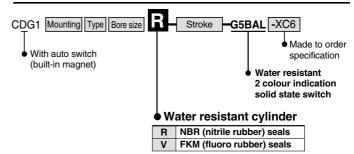



## **Related Equipment** Water Resistant Air Cylinder

## **Compact cylinder**

ø20 to ø100

#### **Specifications**

Action	Double acting single rod	
Bore size (mm)	ø20, ø25, ø32, ø40, ø50, ø63, ø80, ø100	
Cushion	None	
Switch mounting type	Rail mount type	
Made to order	Piston rod/Rod end nut material: Stainless steel (-XC6)	

<sup>\*</sup> Specifications other than above are identical to the standard basic type.


# ø**40** to ø**100**

#### **Specifications**


Action	Double acting single rod	
Bore size (mm)	ø40, ø50, ø63, ø80, ø100	
Cushion	Air cushion	
Switch mounting type	Tie-rod mount type	
Made to order	Piston rod/Rod end nut material: Stainless steel (-XC6)	

Specifications other than above are identical to the standard basic type Note 1) Air-hydro type and boot specification of series CA1 are excluded.

#### **How to Order**

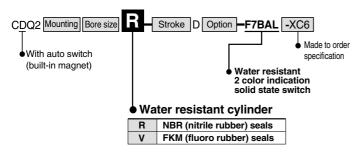

#### **How to Order**

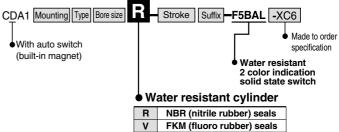

## Compact guide cylinder





#### **Specifications**

Action	Double acting
Bore size (mm)	ø20, ø25, ø32, ø40, ø50, ø63, ø80, ø100
Bearing type	Slide bearing
Cushion	Rubber bumper
Switch mounting type	Direct mount type

<sup>\*</sup> Specifications other than above are identical to the standard basic type

## Cylinder with guide






#### **Specifications**

Action	Double acting
Bore size (mm)	ø32, ø40, ø50
Bearing type	Slide bearing
Cushion	Rubber bumper, Built-in shock absorber
Switch mounting type	Band mount type


<sup>\*</sup> Specifications other than above are identical to the standard basic type Note 1) RBL (coolant resistant) type shock absorber is used.

#### **How to Order**

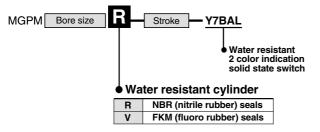

<sup>\*</sup> Use of stainless steel as the piston rod material will be treated as a special order.

#### **How to Order**

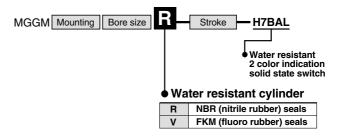

<sup>\*</sup> Use of stainless steel as the piston rod material will be treated as a special order.

# Related Equipment Speed Controller with One-touch Fittings Stainless Steel Series Refer to "Best Pneumatics No. 3" for details.

## **Elbow Type/Universal Type**

**AS-FG** 

		<u> </u>			<u> </u>
JIS symbol		6			
Applicable		<u> </u>	Mo	odel	1
tubing O.D.	Connection threads	Elbow type		Universal type	
(mm)	lineaus	Meter-out	Meter-in	Meter-out	Meter-in
3.2	M5 x 0.8	AS1201FG-M5-23	AS1211FG-M5-23	AS1301FG-M5-23	AS1311FG-M5-23
3.2	R 1/8	AS2201FG-01-23	AS2211FG-01-23	AS2301FG-01-23	AS2311FG-01-23
	M5 x 0.8	AS1201FG-M5-04	AS1211FG-M5-04	AS1301FG-M5-04	AS1311FG-M5-04
4	R 1/8	AS2201FG-01-04	AS2211FG-01-04	AS2301FG-01-04	AS2311FG-01-04
	R 1/4	-02-04	-02-04	-02-04	-02-04
	M5 x 0.8	AS1201FG-M5-06	AS1211FG-M5-06	AS1301FG-M5-06	AS1311FG-M5-06
	R 1/8	AS2201FG-01-06	AS2211FG-01-06	AS2301FG-01-06	AS2311FG-01-06
6	R 1/4	-02-06	-02-06	-02-06	-02-06
	N 1/4	AS3201FG-02-06	AS3211FG-02-06	AS3301FG-02-06	AS3311FG-02-06
	R 3/8	-03-06	-03-06	-03-06	-03-06
	R 1/8	AS2201FG-01-08	AS2211FG-01-08	AS2301FG-01-08	AS2311FG-01-08
8	R 1/4	-02-08	-02-08	-02-08	-02-08
	11 1/4	AS3201FG-02-08	AS3211FG-02-08	AS3301FG-02-08	AS3311FG-02-08
	R 3/8	-03-08	-03-08	-03-08	-03-08
	R 1/8	AS2201FG-01-10	AS2211FG-01-10		
	R 1/4	-02-10	-02-10	AS2301FG-02-10	AS2311FG-02-10
10		AS3201FG-02-10	AS3211FG-02-10	AS3301FG-02-10	AS3311FG-02-10
	R 3/8	-03-10	-03-10	-03-10	-03-10
	R 1/2	AS4201FG-04-10	AS4211FG-04-10	AS4301FG-04-10	AS4311FG-04-10

In-line Type AS-FG

AS3211FG-02-12

AS4211FG-04-12

-03-12



R 1/4

R 3/8

R 1/2

AS3201FG-02-12

AS4201FG-04-12

-03-12

Applicable tubing	Model
O.D. (mm)	In-line type
3.2	AS1001FG-23
	AS1001FG-04
4	AS2001FG-04
6	AS1001FG-06
	AS2001FG-06
	AS2051FG-06
	AS3001EG-06

AS3301FG-02-12

AS4301FG-04-12

-03-12

Applicable tubing	Model
O.D. (mm)	In-line type
8	AS2051FG-08
0	AS3001FG-08
10	AS3001FG-10
10	AS4001FG-10
12	AS3001FG-12
- <del>-</del>	AS4001FG-12

AS3311FG-02-12

AS4311FG-04-12

-03-12

Refer to "Best Pneumatics No. 3" for inch sizes.

#### **Dual Speed Controller**

## **ASD-FG**

### **SUS303**

12

Provides lurching prevention and controls speed of single acting cylinders.



Applicable tubing O.D.	Connection	Model
(mm)	threads	Universal type
4	M5 x 0.8	ASD230FG-M5-04
	M5 x 0.8	ASD230FG-M5-06
	R 1/8	ASD330FG-01-06S
6	R 1/4	ASD430FG-02-06S
		ASD530FG-02-06S
	R 3/8	-03-06S
	R 1/8	ASD330FG-01-08S
8	R 1/4	ASD430FG-02-08S
•	n 1/4	ASD530FG-02-08S
	R 3/8	-03-08\$

Applicable	Connection	Model
tubing O.D. (mm)	threads	Universal type
	R 1/4	ASD430FG-02-10S
40	N 1/4	ASD530FG-02-10S
10	R 3/8	-03-10S
	R 1/2	ASD630FG-04-10S
	R 1/4	ASD530FG-02-12S
12	R 3/8	-03-12S
	R 1/2	ASD630FG-04-12S

Refer to "Best Pneumatics No. 3" for inch sizes.

## **Related Equipment** Refer to "Best Pneumatics No. 4" for details. **One-touch Fittings/Stainless Steel Series**

## Male Connector KGH

	Applicable tubing O.D. (mm)	Connection threads	Model		
		M5 x 0.8	KGH04-M5		
DOM:	4	R 1/8	-01		
		R 1/4	-02		
		M5 x 0.8	KGH06-M5		
	•	R 1/8	-01		
	6	R 1/4	-02		
		R 3/8	-03		
<m5 type=""></m5>	8	R 1/8	KGH08-01		
		R 1/4	-02		
		R 3/8	-03		
	10	R 1/8	KGH10-01		
		R 1/4	-02		
		R 3/8	-03		
2 2 2		R 1/2	-04		
		R 1/4	KGH12-02		
	12	R 3/8	-03		
<r type=""></r>		R 1/2	-04		
	16	R 3/8	KGH16-03		
	16	R 1/2	-04		

## Hexagon Socket Head Male Connector KGS

J			
	Applicable tubing O.D. (mm)	Connection threads	Model
THE RESERVE OF THE PERSON NAMED IN COLUMN 1	4	M5 x 0.8	KGS04-M5
- 101	4	R 1/8	-01
100		M5 x 0.8	KGS06-M5
	6	R 1/8	-01
		R 1/4	-02
<m5 type=""></m5>	8	R 1/8	KGS08-01
		R 1/4	-02
		R 3/8	-03
		R 1/8	KGS10-01
	10	R 1/4	-02
		R 3/8	-03
		R 1/2	-04
		R 1/4	KGS12-02
<r type=""></r>	12	R 3/8	-03
		R 1/2	-04



## Male Elbow KGL

	Applicable tubing O.D. (mm)	Connection threads	Model
		M5 x 0.8	KGL04-M5
	4	R 1/8	-01
- 25		R 1/4	-02
		M5 x 0.8	KGL06-M5
	c	R 1/8	-01
	6	R 1/4	-02
<m5 type=""></m5>		R 3/8	-03
	8	R 1/8	KGL08-01
		R 1/4	-02
		R 3/8	-03
	10	R 1/8	KGL10-01
		R 1/4	-02
		R 3/8	-03
		R 1/2	-04
		R 1/4	KGL12-02
<r type=""></r>	12	R 3/8	-03
		R 1/2	-04
	16	R 3/8	KGL16-03
	10	R 1/2	-04

## Extended Male Elbow KGW

	Applicable tubing O.D. (mm)	Connection threads	Model
Trends.		M5 x 0.8	KGW04-M5
10.0	4	R 1/8	-01
		R 1/4	-02
		M5 x 0.8	KGW06-M5
₩	6	R 1/8	-01
<m5 type=""></m5>		R 1/4	-02
		R 3/8	-03
	8	R 1/8	KGW08-01
		R 1/4	-02
		R 3/8	-03
100		R 1/4	KGW10-02
	10	R 3/8	-03
		R 1/2	-04
		R 1/4	KGW12-02
D types	12	R 3/8	-03
<r type=""></r>		R 1/2	-04

## Universal Male Elbow KGV

<u> </u>	Applicable tubing O.D. (mm)	Connection threads	Model
6	4	M5 x 0.8	KGV04-M5
	4	R 1/8	-01
-		M5 x 0.8	KGV06-M5
<m5 type=""></m5>	6	R 1/8	-01
		R 1/4	-02
	8	R 1/8	KGV08-01
		R 1/4	-02
		R 3/8	-03
	10	R 1/4	KGV10-02
Dame	10	R 3/8	-03
<r type=""></r>	10	R 3/8	KGV12-03
	12	R 1/2	-04



## Branch Tee KGT

Applicable tubing O.D. (mm)  M5 x 0.8  KGT04-M5  A 1/8  R 1/8  -01  R 1/4  -02  M5 x 0.8  KGT06-M5  R 1/8  -01  R 1/4  -02  R 3/8  -03  R 1/8  KGT08-01  R 1/4  -02  R 3/8  -03				
4 R 1/8 -01 R 1/4 -02  M5 x 0.8 KGT06-M5 R 1/8 -01 R 1/4 -02 R 3/8 -03 R 1/8 KGT08-01 R 1/8 KGT08-01 R 1/4 -02	Model		tubing O.D.	
R 1/4 -02  M5 x 0.8 KGT06-M5  R 1/8 -01  R 1/4 -02  R 3/8 -03  R 1/8 KGT08-01  R 1/8 KGT08-01  R 1/4 -02	KGT04-M5	M5 x 0.8		
M5 x 0.8 KGT06-M5  R 1/8 -01  R 1/4 -02  R 3/8 -03  R 1/8 KGT08-01  8 R 1/4 -02	-01	R 1/8	4	
<m5 type=""> 6   R 1/8 -01   R 1/4 -02   R 3/8 -03   R 1/8 KGT08-01   R 1/4 -02</m5>	-02	R 1/4		
<m5 type=""> 6  R 1/4 -02 R 3/8 -03 R 1/8 KGT08-01 R 1/4 -02</m5>	KGT06-M5	M5 x 0.8		
R 1/4 -02 R 3/8 -03 R 1/8 KGT08-01 R 1/4 -02	-01	R 1/8	c	
R 1/8 KGT08-01 R 1/4 -02	-02	R 1/4	0	<m5 type=""></m5>
8 R 1/4 -02	-03	R 3/8		
	KGT08-01	R 1/8	8	
D 0/0	-02	R 1/4		
H 3/8   -03	-03	R 3/8		
R 1/8 <b>KGT10-01</b>	KGT10-01	R 1/8		
<r type=""></r>	-02	R 1/4	40	<r type=""></r>
R 3/8 -03	-03	R 3/8	10	71
R 1/2 -04	-04	R 1/2		
R 1/4 <b>KGT12-02</b>	KGT12-02	R 1/4		
<b>12</b> R 3/8 -03	-03	R 3/8	12	
R 1/2 -04	-04	R 1/2		
16 R 3/8 KGT16-03	KGT16-03	R 3/8	16	
R 1/2 -04	-04	R 1/2	10	

## Branch Male Elbow KGLU

	Applicable tubing O.D. (mm)	Connection threads	Model
		M5 x 0.8	KGLU04-M5
( "	4	R 1/8	-01
		R 1/4	-02
		M5 x 0.8	KGLU06-M5
	6	R 1/8	-01
<m5 type=""></m5>		R 1/4	-02
		R 3/8	-03
(6)	8	R 1/8	KGLU08-01
		R 1/4	-02
1		R 3/8	-03
		R 1/4	KGLU10-02
	10	R 3/8	-03
		R 1/2	-04
<r type=""></r>		R 1/4	KGLU12-02
	12	R 3/8	-03
		R 1/2	-04

## Double Branch "Y" KGUD

	Applicable tubing O.D. (mm)	Connection threads	Model
	4	R 1/8	KGUD04-01
	4	R 1/4	-02
	_	R 1/8	KGUD06-01
	6	R 1/4	-02

## Plug-in "Y" KGU

	Applicable tubing O.D. (mm)	Connection threads	Model
		M5 x 0.8	KGU04-M5
A	4	R 1/8	-01
		R 1/4	-02
		M5 x 0.8	KGU06-M5
ME tumo	6	R 1/8	-01
<m5 type=""></m5>	Ü	R 1/4	-02
		R 3/8	-03
<r type=""></r>	8	R 1/8	KGU08-01
		R 1/4	-02
		R 3/8	-03
		R 1/4	KGU10-02
	10	R 3/8	-03
		R 1/2	-04
<11 type>		R 1/4	KGU12-02
	12	R 3/8	-03
		R 1/2	-04


## Male Delta KGD

Aveil	Applicable tubing O.D. (mm)	Connection threads	Model
		M5 x 0.8	KGD04-M5
	4	R 1/8	-01
		R 1/4	-02
		M5 x 0.8	KGD06-M5
₩	6	R 1/8	-01
<m5 type=""></m5>		R 1/4	-02
		R 3/8	-03
	8	R 1/8	KGD08-01
		R 1/4	-02
		R 3/8	-03
		R 1/4	KGD10-02
	10	R 3/8	-03
<r type=""></r>		R 1/2	-04
		R 1/4	KGD12-02
	12	R 3/8	-03
		R 1/2	-04

## Straight Union KGH

A	Applicable tubing O.D. (mm)	Model	
	4	KGH04-00	
	6	KGH06-00	
	8	KGH08-00	
	10	KGH10-00	
	12	KGH12-00	


## Bulkhead Union KGE

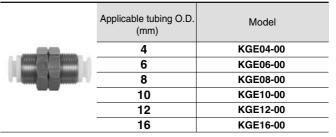




# Related Equipment One-touch Fittings/Stainless Steel Series


## Union Elbow KGL

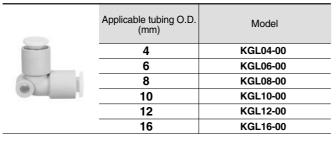

## Union Tee KGT

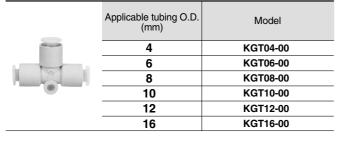

## Union "Y" KGU

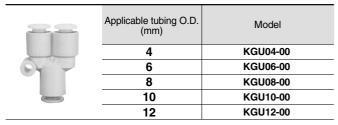

## Different Dia. Straight KGH

<u>a</u> (	<b>b</b> '	Applicable tubing O.D. (mm)		Model
	_/	a	<b>(g)</b>	
	l' ]	4	6	KGH04-06
100	ľ.	6	8	KGH06-08
		8	10	KGH08-10
		10	12	KGH10-12

## Delta KGD

23

	Applicable tubing O.D. (mm)	Model	
	4	KGD04-00	
	6	KGD06-00	
	8	KGD08-00	
	10	KGD10-00	
	12	KGD12-00	

## Different Dia. Tee KGT

<u></u>	Applicable tubing O.D. (mm)		Model	
- 0	a	b		
2-( <u>a</u> )	4	6	KGT04-06	
1	6	8	KGT06-08	
	8	10	KGT08-10	
-	10	12	KGT10-12	

## Different Dia. Union "Y" KGU

<u>2-@</u>	Applicable (m	tubing O.D. m)	Model
-	(a)	b	
	4	6	KGU04-06
	6	8	KGU06-08
	8	10	KGU08-10
	10	12	KGU10-12
<u>(b)</u>			

## Different Dia. Double Union "Y" KGUD

Different Dia.	Double	Officia	•	NGOD
4-@	Applicable tubing O.D. (mm)			Model
	a	b		
	4	6		KGUD04-06
	6	8		KGUD06-08
(b)				

## Branch Elbow KGLU

	Applicable tubing O.D. (mm)	Model	
1 6	4	KGLU04-00	
	6	KGLU06-00	
	8	KGLU08-00	
	10	KGLU10-00	
	12	KGLU12-00	

## Female Union KGF

	Applicable tubing O.D. (mm)	Connection threads	Model
	4	Rc 1/8	KGF04-01
	4	Rc 1/4	-02
-		Rc 1/8	KGF06-01
	6	Rc 1/4	-02
		Rc 3/8	-03
		Rc 1/8	KGF08-01
	8	Rc 1/4	-02
		Rc 3/8	-03
	-10	Rc 1/4	KGF10-02
	10	Rc 3/8	-03
		Rc 1/4	KGF12-02
	12	Rc 3/8	-03
		Rc 1/2	-04

## One-touch Fittings/Stainless Steel Series

## Plug-in Elbow KGL



Applicable tubing O.D. (mm)	Applicable fitting size	Model
4	4	KGL04-99
6	6	KGL06-99
8	8	KGL08-99
10	10	KGL10-99
12	12	KGL12-99

## Plug-in Reducer KGR



		Applicable		
	tubing O.D.	fitting	Model	
	(mm)	size		
		6	KGR04-06	
	4	8	-08	
_		10	-10	
		4	KGR06-04	
	6	8	-08	
		10	-10	
		12	-12	
	8	10	KGR08-10	
	0	12	-12	
	10	12	KGR10-12	
	10	16	-16	
	12	16	KGR12-16	
	-			

## Bulkhead Connector KGE



	Applicable tubing O.D. (mm)	Connection threads	Model
	4	R 1/8	KGE04-01
	4	R 1/4	-02
		R 1/8	KGE06-01
	6	R 1/4	-02
		R 3/8	-03
	8	R 1/8	KGE08-01
		R 1/4	-02
		R 3/8	-03
•	10	R 1/4	KGE10-02
	10	R 3/8	-03
	40	R 3/8	KGE12-03
	12	R 1/2	-04
	16	R 3/8	KGE16-03
	10	R 1/2	-04

## Tube Cap KGC



Applicable tubing O.D. (mm)	Model
4	KGC04-00
6	KGC06-00
8	KGC08-00
10	KGC10-00
12	KGC12-00
16	KGC16-00



# Related Equipment Miniature Fittings Refer to "Best Pneumatics No. 4" for details.



## Series MS

Description	Note	Model	Appli	cation	
Barb fitting for soft tube	ø3.18/2.18 x M5	MC EALL O		soft nylon	
THE PARTY OF THE P	ø3.18/2 x M5	MS-5AU-3	For piping polyurethane tubing		
	ø4/2.5 x M5	MS-5AU-4		soft nylon	
	ø6/4 x M5	MS-5AU-6	and polyurethane tubing		
Barb elbow for soft tube	ø3.18/2.18 x M5	MS-5ALHU-3	For piping soft nylon tubing For piping		
The same of the sa	ø3.18/2 x M5		polyurethane tubing	Unrestricted	
	ø4/2.5 x M5	MS-5ALHU-4	For piping soft nylon and	360° positioning and fastening around the stud axis	
	ø6/4 x M5	MS-5ALHU-6	polyurethane tubing		
Hose nipple	ø4/2.5 x M5	MS-5H-4	For piping		
	ø6/4 x M5	MS-5H-6	soft nylon and polyurethane tubing		
Hose elbow	ø4/2.5 x M5	MS-5HLH-4	For piping nylon, soft nylon and polyurethane tubing		
	ø6/4 x M5	MS-5HLH-6	Unrestricted 360° positioning and fastening around the stud axis		
Gasket	Material: PVC	M-5G1	Seal for M	5 threads	

Description	Note	Model	Appli	cation	
Universal elbow	14010	Wiodei	Unrestricte		
6	M5 female x M5 male	MS-5UL	360° posit	ioning iing around	
Universal tee	M5 female x M5 female x M5 male	MS-5UT	Unrestricted 360° positioning and fastening around the stud axis		
Reducer bushing	R 1/8 x M5 female	MS-5B	Connects Rc 1/8 to M5 fitting		
Plug		MS-5P	Closes the unused M5 port		
Extension fitting	M5 male x M5 female	MS-5J	Extends piping to prevent interference with fittings		
Nipple	M5 male x M5 male	MS-5N	Connects a fitting to equipment or another fitting		
Universal nipple	M5 male x M5 male PAT	MS-5UN	Unrestricted positions and connection at 360° around the stud axis		
Barb tee for soft tube	ø3.18/2.18 x M5	MS-5ATHU-3	For piping soft nylon tubing For piping		
	ø3.18/2 x M5		polyurethane tubing	Unrestricted	
	ø4/2.5 x M5 <b>MS</b> -		For piping soft nylon and	360° positioning and fastening around the	
	ø6/4 x M5	MS-5ATHU-6	polyurethane tubing	stud axis	
Gasket (H)	Material: Nylon 66 GF30%	M-5GH	Used only with: MS-5ALHU-6 MS-5HLH-4 MS-5HLH-6 MS-5ATHU-6		





## **Related Equipment Tubing**

## **Nylon Tubing**

## Series T

## **Polyurethane Tubing**

## Series TU

Model	T0425	T0403	T0604	T0645	T0806	T1075	T1209	T1613
Fluid		Air, Water						
Max. operating pressure (at 20°C)	1.5MPa							
Burst pressure	Refer to series T burst pressure characteristics curve. Note)							
Min. bending radius mm	13	25	24	36	48	60	75	100
Operating temperature	-20 to 60°C, With water: 0 to 40°C (with no freezing)							
Material				Nylo	n 12			

Note) Best Pneumatics No.4, page 2.4-1

T0806

T1209

Colour symbol -20

Colour symbol -20

Colour symbol -20

T1613 Colour symbol -20

20m roll

O.D. I.D. Colour symbo

Black (B) White (W)

Red (R) Blue (BU)

Yellow (Y) Green (G)

Black (B)

White (W) Black (B) White (W) Red (R)

Blue (BU)

Yellow (Y) Green (G) Black (B)

White (W)

Black (B) White (W) Red (R)

Blue (BU)

Yellow (Y) Green (G) Black (B) White (W)

Yellow (Y) Green (G) Black (B) White (W)

Red (R)

16 13 Black (B) White (W)

Blue (BU) Yellow (Y) Green (G)

12 9

6

4.5

6 8

10 7.5 Red (R)
Blue (BU)

4	$\cap \cap_{r}$	 

100m roll								
Model	O.D.	I.D.	Colour (colour symbol)	Model				
	4	2 5	Black (B)	T0425				
	4	2.5	White (W)	Colour symbol -100				
T0425		4	Black (B)	T0604				
Colour symbol -20	6	4	White (W)	Colour symbol -100				
		8 6	Black (B)	T0806				
	8		White (W)	Colour symbol -100				
T0403	40	<b>-</b> -	Black (B)	T1075				
Colour symbol -20	10	7.5	White (W)	Colour symbol -100				
	40		Black (B)	T1209				
	12	9	White (W)	Colour symbol -100				
T0604	40	40	Black (B)	T1613				
Colour symbol -20	16	13	White (W)	Colour symbol -100*				
	* T1	613	is on a re	el.				
T0645								
Colour symbol -20								

Model	TU0425	TU0604	TU0805	TU1065	TU1208		
Fluid	Air, Water						
Max. operating pressure (at 20°C)	0.8MPa						
Burst pressure	Refer to series TU burst pressure characteristics curve. Note)						
Min. bending radius mm	10 15 20 27 35						
Operating temperature	-20 to 60°C, With water: 0 to 40°C (with no freezing)						
Material	Polyurethane						

Note) Best Pneumatics No.4, page 2.4-3

#### 20m roll **100m** roll

O.D.	I.D.	Colour (colour symbol)	Model		O.D.	I.D.	Colour (colour symbol)	Model
		Black (B)				4 2.5	Black (B)	
		White (W)	TU0425 Colour symbol -20				White (W)	
	2.5	Red (R)					Red (R)	
4		Blue (BU)			,		Blue (BU)	TU0425
4		Yellow (Y)			4		Yellow (Y)	Colour symbol -100
		Green (G)					Green (G)	
		Clear (C)					Clear (C)	
		Orange (YR)					Orange (YR)	
		Black (B)			6	4	Black (B)	
		White (W)					White (W)	
		Red (R)					Red (R)	
6	4	Blue (BU)	TU0604				Blue (BU)	TU0604
0	4	Yellow (Y)	Colour symbol -20				Yellow (Y)	Colour symbol -100
		Green (G)					Green (G)	
		Clear (C)					Clear (C)	
		Orange (YR)					Orange (YR)	
	5	Black (B)	TU0805 Colour symbol -20		8	5	Black (B)	
		White (W)					White (W)	
		Red (R)					Red (R)	
8		Blue (BU)					Blue (BU)	TU0805
"		Yellow (Y)					Yellow (Y)	Colour symbol -100
		Green (G)					Green (G)	
		Clear (C)					Clear (C)	
		Orange (YR)					Orange (YR)	
		Black (B)			10	6.5	Black (B)	
		White (W)	TU1065 Colour symbol -20				White (W)	
		Red (R)					Red (R)	
10	6.5	Blue (BU)					Blue (BU)	TU1065
.0	0.0	Yellow (Y)					Yellow (Y)	Colour symbol -100
		Green (G)					Green (G)	
		Clear (C)					Clear (C)	
		Orange (YR)					Orange (YR)	
	8	Black (B)					Black (B)	
		White (W)	TU1208 Colour symbol -20		12	8	White (W)	
		Red (R)					Red (R)	T114000
12		Blue (BU)					Blue (BU)	TU1208
_		Yellow (Y)					Yellow (Y)	Colour symbol -100
		Green (G)					Green (G)	
		Clear (C)					Clear (C)	
		Orange (YR)					Orange (YR)	




# Related Equipment Floating Joint/Stainless Steel Type

Series JS




Refer to SMC Information No. 99-E475 for details.

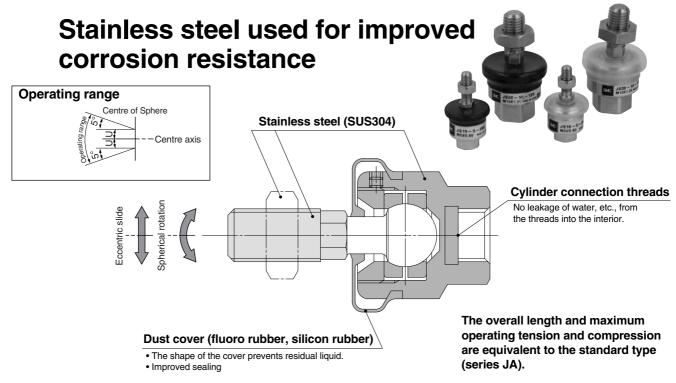

## **Models and Specifications**

Model	Applicable cylinder bore size (mm)	Applicable cylinder nominal thread size	Max. tension and compression N	Allowable eccentricity U	Operating Pneumatic cylinder	pressure Hydraulic cylinder	Ambient temperature
JS10-4-070	10	M4 x 0.7	80	0.5			
JS16-5-080	10, 16	M5 x 0.8	210	0.5			
JS20-8-125	20	M8 x 1.25	1100	0.5	1MPa	Note 2)	5 to 6000
JS32-10-125	25, 32	M10 x 1.25	2500	0.5	or less	3.5MPa	-5 to 60°C
JS40-14-150	40	M14 x 1.5	6000	0.75		or less	
JS63-18-150	50, 63	M18 x 1.5	11000	1	]		

Note 1) Use the applicable bore sizes as a guide. For details, consult the catalogue of the cylinder being used for the rod end thread size. Note 2) For 3.5MPa hydraulic cylinders, operate within the maximum tension and compression force.

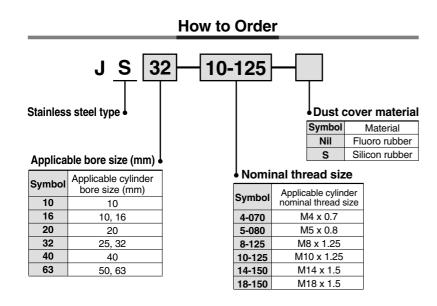



## **Technical Data Chemical Resistance Table**

- A: No influence or almost no influence
  B: Some influence, but operational depending on conditions
  C: Avoid use if possible
- D: Substantial influence, not suitable for use
- -: Not tested

Parts			Body		Seal		Water resistant auto switch	
Material			Stainless steel	Aluminum	Nitrile rubber	Fluoro rubber	Resin casing	Lead wire
Chemical Symbol (Concentration weight %, Temperature °C)		SUS304	Al	NBR (-10 to 60°C)	FKM (-40 to 150°C)	PBT (-10 to 60°C)	PVC (-10 to 60°C)	
	1	Hydrochloric acid (20%, Room temperature)	D	D	В	Α	Α	В
Inorganic salt	2	Chromic acid (25%, 70°C)	В	D	D	Α	Α	В
	3	Boric acid	В	D	Α	Α	Α	В
	4	Sulphuric acid (30%, Room temperature)	D	D	Α	Α	Α	В
	5	Phosphoric acid (50%, Room temperature)	В	D	Α	Α	Α	В
Inorganic alkali	6	Ammonium hydroxide	В	В	D	Α	Α	В
	7	Sodium hydroxide (30%, Room temperature)	Α	D	Α	С	Α	D
	8	Calcium hydroxide	С	D	Α	Α	Α	Α
	9	Magnesium hydroxide	В	В	Α	Α	Α	Α
	10	Acetylene	Α	Α	Α	Α	Α	Α
Organic solvent	11	Formic acid (25%, Room temperature)	В	С	D	С	С	С
	12	Citric acid	С	D	Α	Α	С	В
	13	Acetic acid (10%, Room temperature)	Α	С	С	В	Α	В
	14	Lactic acid (5%, 20°C)	В	D	Α	Α	Α	В
Other (oil, gas, etc.)	15	Linseed oil	Α	В	Α	Α	С	С
	16	Potassium chloride	В	С	Α	Α	Α	Α
	17	Calcium chloride	В	Α	Α	Α	Α	Α
	18	Mineral oil	Α	Α	Α	Α	Α	С
	19	Sodium hypochlorite (2%, Room temperature)	В	D	D	Α	Α	С
	20	Sodium chloride	В		Α	Α	Α	Α
	21	Carbon dioxide	Α	Α	Α	Α	Α	Α
	22	Natural gas	Α	Α	Α	Α	Α	Α
	23	Boric acid	В	D	Α	Α	Α	В

<sup>\*</sup> Unless noted otherwise, the solution concentration is in a saturated state.

**Chemical Resistance Table** 



<sup>\*</sup> Chemical resistance is a guide that applies only to the stainless steel cylinder parts, and does not guarantee the performance of air cylinders (auto switches). Be sure to perform a verification test before operating.

<sup>\*</sup> The temperature range for the protective label cover is between -40 to 110°C, and the temperature range for grease is between -20 to 150°C. (However, there is no relationship with the chemicals listed above.)



# Series CJ5-S/CG5-S Safety Instructions

These safety instructions are intended to prevent a hazardous situation and/or equipment damage. These instructions indicate the level of potential hazard by a label of "Caution", "Warning" or "Danger". To ensure safety, be sure to observe ISO 4414 Note 1), JIS B 8370 Note 2) and other safety practices.

**Caution:** Operator error could result in injury or equipment damage.

**Warning**: Operator error could result in serious injury or loss of life.

**Danger**: In extreme conditions, there is a possible result of serious injury or loss of life.

Note 1) ISO 4414: Pneumatic fluid power – Recommendations for the application of equipment to transmission and control systems

Note 2) JIS B 8370: General Rules for Pneumatic Equipment

## **Marning**

1. The compatibility of pneumatic equipment is the responsibility of the person who designs the pneumatic system or decides its specifications.

Since the products specified here are used in various operating conditions, their compatibility for the specific pneumatic system must be based on specifications or after analysis and/or tests to meet your specific requirements.

2. Only trained personnel should operate pneumatically operated machinery and equipment.

Compressed air can be dangerous if handled incorrectly. Assembly, handling or repair of pneumatic systems should be performed by trained and experienced operators.

- 3. Do not service machinery/equipment or attempt to remove components until safety is confirmed.
- 1. Inspection and maintenance of machinery/equipment should only be performed after confirmation of safe locked-out control positions.
- 2. When equipment is to be removed, confirm the safety process as mentioned above. Cut the supply pressure for this equipment and exhaust all residual compressed air in the system.
- 3. Before machinery/equipment is restarted, take measures to prevent shooting-out of cylinder piston rod, etc. (Bleed air into the system gradually to create back pressure.)
- 4. Contact SMC if the product is to be used in any of the following conditions:
- 1. Conditions and environments beyond the given specifications, or if product is used outdoors.
- 2. Installation on equipment in conjunction with atomic energy, railway, air navigation, vehicles, medical equipment, food and beverages, recreation equipment, emergency stop circuits, press applications, or safety equipment.
- 3. An application which has the possibility of having negative effects on people, property, or animals, requiring special safety analysis.







## **Actuator Common Precautions 1**

Be sure to read before handling.

For detailed individual precautions on each series, refer to the main catalogue sections.

#### Design

## **△**Warning

1. There is a danger of sudden action by air cylinders if sliding parts of machinery are twisted, etc., and changes in forces occur.

In such cases, human injury may occur; e.g., by catching hands or feet in the machinery, or damage to the machinery itself may occur. Therefore, the machine should be designed to avoid such dangers.

2. Install a protective cover when there is a risk of human injury.

If a driven object and moving parts of a cylinder pose a danger of human injury, design the structure to avoid contact with the human body.

3. Securely tighten all stationary parts and connected parts so that they will not become loose.

Especially when a cylinder operates with high frequency or is installed where there is a lot of vibration, ensure that all parts remain secure.

4. A deceleration circuit may be required.

When a driven object is operated at high speed or the load is heavy, a cylinder's cushion will not be sufficient to absorb the impact. Install a deceleration circuit to reduce the speed before cushioning to relieve the impact. In this case, the rigidity of the machinery should also be examined.

5. Consider a possible drop in operating pressure due to a power outage, etc.

When a cylinder is used in a clamping mechanism, there is a danger of work pieces dropping if there is a decrease in clamping force due to a drop in circuit pressure caused by a power outage, etc. Therefore, safety equipment should be installed to prevent damage to machinery and/or human injury. Suspension mechanisms and lifting devices also require consideration for drop prevention.

6. Consider a possible loss of power source.

Measures should be taken to protect against human injury and equipment damage in the event that there is a loss of power to equipment controlled by air pressure, electricity or hydraulics, etc.

7. Design circuitry to prevent sudden lurching of driven objects.

When a cylinder is driven by an exhaust center type directional control valve or when starting up after residual pressure is exhausted from the circuit, etc., the piston and its driven object will lurch at high speed if pressure is applied to one side of the cylinder because of the absence of air pressure inside the cylinder. Therefore, select equipment and design circuits to prevent sudden lurching, because there is a danger of human injury and/or damage to equipment when this occurs.

8. Consider emergency stops.

Design so that human injury and/or damage to machinery and equipment will not be caused when machinery is stopped by a safety device under abnormal conditions, such as a power outage or a manual emergency stop.

9. Consider the action when operation is restarted after an emergency stop or abnormal stop.

Design the machinery so that human injury or equipment damage will not occur upon restart of operation. When the cylinder has to be reset at the starting position, install safe manual control equipment.

#### Selection

## **Marning**

1. Confirm the specifications.

The products advertised in this catalog are designed according to use in industrial compressed air systems. If the products are used in conditions where pressure, temperature, etc., are out of specification, damage and/or malfunction may be caused. Do not use in these conditions. (Refer to specifications.)

Consult SMC if you use a fluid other than compressed air.

2. Intermediate stops

When intermediate stopping of a cylinder piston is performed with a 3 position closed center type directional control valve, it is difficult to achieve stopping positions as accurate and precise as with hydraulic pressure due to the compressibility of air.

Furthermore, since valves and cylinders, etc., are not guaranteed for zero air leakage, it may not be possible to hold a stopped position for an extended period of time. Contact SMC in case it is necessary to hold a stopped position for an extended period.

## **∆** Caution

1. Operate within the limits of the maximum usable stroke.

The piston rod will be damaged if operated beyond the maximum stroke. Refer to the air cylinder model selection procedure for the maximum useable stroke.

2. Operate the piston within a range such that collision damage will not occur at the stroke end

Operate within a range such that damage will not occur when the piston having inertial force stops by striking the cover at the stroke end. Refer to the cylinder model selection procedure for the range within which damage will not occur.

- 3. Use a speed controller to adjust the cylinder drive speed, gradually increasing from a low speed to the desired speed setting.
- 4. Provide intermediate supports for long stroke cylinders.

Provide intermediate supports for cylinders with long strokes to prevent rod damage due to sagging of the rod, deflection of the tube, vibration and external loads, etc.







## **Actuator Common Precautions 2**

Be sure to read before handling.

For detailed individual precautions on each series, refer to the main catalogue sections.

## Mounting

## **^**Caution

1. Be certain to align the rod axis with the load and direction of movement when connecting.

When not properly aligned, the rod and tube may be twisted, and damage may be caused due to wear on areas such as the inner tube surface, bushings, rod surface and seals.

- 2. When an external guide is used, connect the rod end and the load in such a way that there is no interference at any point within the stroke.
- 3. Do not scratch or gouge the sliding parts of the cylinder tube or piston rod, etc., by striking or grasping them with other objects.

Cylinder bores are manufactured to precise tolerances, so that even a slight deformation may cause malfunction. Also, scratches or gouges, etc., in the piston rod may lead to damaged seals and cause air leakage.

4. Prevent the seizure of rotating parts.

Prevent the seizure of rotating parts (pins, etc.) by applying grease.

5. Do not use until you can verify that equipment can operate properly.

Verify correct mounting by appropriate function and leakage inspections after compressed air and power are connected following mounting, maintenance or conversions.

6. Instruction manual

The product should be mounted and operated after thoroughly reading the manual and understanding its contents.

Keep the instruction manual where it can be referred to as needed

#### **Piping**

## **△**Caution

1. Preparation before piping

 
Before piping is connected, it should be thoroughly blown out with air (flushing) or washed to remove chips, cutting oil and other debris from inside the pipe.

2. Wrapping of pipe tape

When screwing together pipes and fittings, etc., be certain that chips from the pipe threads and sealing material do not get inside the piping.

Also, when pipe tape is used, leave 1.5 to 2 thread ridges exposed at the end of the threads.





#### Cushion

## **△**Caution

1. Readjust using the cushion needle.

Cushion is adjusted at the factory, however, the cushion needle on the cover should be readjusted when the product is put into service, based upon factors such as the size of the load and the operating speed. When the cushion needle is turned clockwise, the restriction becomes smaller and the cushion's effectiveness is increased. Tighten the lock nut securely after adjustment is performed.

2. Do not operate with the cushion needle in a fully closed condition.

This will cause damage to the seals.

#### **Air Supply**

## **△**Warning

1. Use clean air.

Do not use compressed air which includes chemicals, synthetic oils containing organic solvents, salt or corrosive gases, etc., as it can cause damage or malfunction.

## **△**Caution

1. Install air filters.

Install air filters at the upstream side of valves. The filtration degree should be  $5\mu m$  or finer.

2. Install an after cooler, air dryer or water separator, etc.

Air that includes excessive drainage may cause malfunction of valves and other pneumatic equipment. To prevent this, install an after cooler, air dryer or water separator, etc.

3. Use the product within the specified range of fluid and ambient temperature.

Take measures to prevent freezing, since moisture in circuits can be frozen under 5°C, and this may cause damage to seals and lead to malfunction.

Refer to SMC's "Air Cleaning Equipment" catalog for further details on compressed air quality.

#### Maintenance

## **△**Warning

1. Removal of equipment, and supply/exhaust of compressed air.

When equipment is removed, first check measures to prevent dropping of driven objects and run-away of equipment, etc. Then cut off the supply pressure and electric power, and exhaust all compressed air from the system.

When machinery is restarted, proceed with caution after confirming measures to prevent cylinder lurching.

## **△**Caution

1. Drain flushing

Remove drainage from air filters regularly. (Refer to specifications.)



## Stainless Steel Cylinder Series CJ5-S/CG5-S Specific Product Precautions

Be sure to read before handling.

Refer to pages 29 through 31 for safety instructions and actuator common precautions.

#### Design

## **⚠** Warning

1. Note the weight of the stainless steel products.

Since the weight of stainless steel cylinders is approximately 1.5 to 3 times heavier than the standard products (with aluminum body), be careful when calculating weight estimates. Also, when mounting the cylinder on equipment where vibration is expected, avoid using single side brackets such as the flange type, and use double side brackets such as the foot type instead.

#### Selection

## **△**Warning

 Generally, use nitrile rubber (NBR) seals with liquids that do not contain chlorine and sulphur, and use fluoro rubber (FKM) seals with liquids that contain chlorine and sulphur.

However, depending on the type and the brand of liquid (such as cleaning solvent) that splashes on the cylinder, the operating life of seals may be reduced dramatically. In cases where special additives are used, or where liquid caused trouble with the conventional nitrile or fluoro rubber seals in the past, request an investigation or set up a test period for the use of the seals.

2. Even the fluoro rubber specification may not be applicable depending on the type of chemicals and the operating temperature. Therefore, be sure to verity the seal's applicability before use.

#### Mounting

## **Warning**

1. Do not rotate the cover.

If the cover is rotated when the cylinder is mounted or when fittings are screwed in, it may cause damage from the joint section of the cover.

#### **Operating Environment**

## **△**Warning

1. Fully consider the compatibility of stainless steel.

The corrosion resistance of stainless steel is not effective against all media and corrosive environments. Corrosion proceeds rapidly with strong hydrochloric acid, hydrofluoric acid, and high temperature ammonium gas, etc. Therefore its compatibility to the environment must be considered carefully.

2. Do not operate cylinders with auto switches in environments where oil and chemicals are used.

Contact SMC when operating in environments with coolants, cleaning solvents, various oils or chemicals, as it may cause adverse effects (faulty insulation, malfunction due to swelling of the potting resin, and hardening of lead wires, etc) to auto switches even in a short period of time. Even with the fluoro rubber seal specification, the auto switch related parts (switch body, mounting bracket, and built-in magnet) are identical to the standard specifications. Therefore, consult SMC regarding the cylinder's compatibility (such as chemical resistance) with an environment (chemicals, etc.) before operating.

3. Do not immerse the cylinder in water or chemicals.

When the cylinder is operated in a condition with water pressure, the fluid leaks into the cylinder in the early stages. In the worst case, the fluid may back flow inside the piping and damage the solenoid valve.

### Maintenance

## **⚠** Caution

1. If there is a reduction in grease lubrication and reapplication of grease is necessary, use the special grease shown below.

Grease kit part no. for stainless steel cylinders

• GR-R-010 (10g)

#### **Precautions for series CG5-S**

- 1. Sealant\* is used on the threads of the connecting sections of the cover and the cylinder tube for air-tight construction. When disassembling the cylinder, the old sealant must be completely removed, and new sealant must be applied before re-assembling.
  - \* Loctite 542 (medium strength) or equivalent
- 2. Ø50 or larger bore size cylinders cannot be disassembled.

When disassembling cylinders with bore sizes of  $\varnothing 20$  through  $\varnothing 40$ , grip the double flat part of either the head cover or the rod cover with a vise and loosen the other side with a wrench or a monkey wrench, etc., and then remove the cover. When retightening, tighten approximately 2 degrees more than the original position. (Cylinders with  $\varnothing 50$  or larger bore sizes are tightened with a large tightening torque and cannot be disassembled. Contact SMC when disassembly is required.)







## Stainless Steel Cylinder

## **Water Resistant Auto Switch Precautions 1**

Be sure to read before handling.

### **Design and Selection**

## **Warning**

#### 1. Confirm the specifications.

Read the specifications carefully and use this product appropriately. The product may be damaged or malfunction if it is used outside the range of specifications of current load, voltage, temperature or impact.

## 2. Take precautions when multiple cylinders are used close together.

When multiple auto switch cylinders are used in close proximity, magnetic field interference may cause the switches to malfunction. Maintain a minimum cylinder separation of 40mm. (When the allowable separation is indicated for each cylinder series, use the specified value.)

## 3. Pay attention to the length of time that a switch is ON at an intermediate stroke position.

When an auto switch is placed at an intermediate position of the stroke and a load is driven at the time the piston passes, the auto switch will operate, but if the speed is too great the operating time will be shortened and the load may not operate properly. The maximum detectable piston speed is:

$$V(mm/s) = \frac{Auto \text{ switch operating range (mm)}}{Time \text{ load applied (ms)}} \times 1000$$

#### 4. Keep wiring as short as possible.

Although wire length should not affect switch function, use wiring 100m or shorter.

## 5. Take precautions for the internal voltage drop of the switch.

Generally, the internal voltage drop will be greater with a 2 wire solid state switch than a reed switch, and the load supply voltage (subtract the internal voltage drop of the switch from the power supply voltage) becomes lower.

Load supply voltage > Minimum operating voltage of load

If the above requirement is not satisfied, malfunction will occur (will not turn ON). Therefore, confirm the specifications before operating.

st Note that the voltage drop will be large when connected in a serial arrangement.

Also note that a 24VDC relay is not applicable.

## **Marning**

### 6. Pay attention to leakage current.

With a 2 wire solid state auto switch, current (leakage current) flows to the load to operate the internal circuit even when in the OFF state.

Operating current of load (OFF condition)>Leakage current

If the above requirement is not satisfied, it will not reset correctly (stays ON). Use a 3 wire switch if this specification will not be satisfied.

Furthermore, leakage current flow to the load will be "n" times larger when "n" auto switches are connected in parallel.

## 7. Do not use a load that generates surge voltage.

Although a zener diode for surge protection is connected at the output side of a solid state auto switch, damage may still occur if the surge is applied repeatedly. When a load, such as a relay or solenoid valve, which generates surge is directly driven, use a type of switch with a built-in surge absorbing element.

#### 8. Cautions for use in an interlock circuit

When an auto switch is used for an interlock signal requiring high reliability, devise a double interlock system to avoid trouble by providing a mechanical protection function, or by also using another switch (sensor) together with the auto switch. Also perform periodic maintenance and confirm proper operation.

## 9. Ensure sufficient clearance for maintenance activities.

When designing an application, be sure to allow sufficient clearance for maintenance and inspections.







## **Stainless Steel Cylinder**

## **Water Resistant Auto Switch Precautions 2**

Be sure to read before handling.

### **Mounting and Adjustment**

## **△**Warning

#### 1. Do not drop or bump.

Do not drop, bump or apply excessive impacts (1000m/s² or more for solid state switches) while handling.

Although the body of the switch may not be damaged, the inside of the switch could be damaged and cause a malfunction.

### 2 Do not carry a cylinder by the auto switch lead wires.

Never carry a cylinder by its lead wires. This may not only cause broken lead wires, but it may cause internal elements of the switch to be damaged by the stress.

## 3. Mount switches using the proper tightening

When a switch is tightened beyond the range of tightening torque, the mounting screws, mounting bracket or switch may be

On the other hand, tightening below the range of tightening torque may allow the switch to slip out of position.

#### 4. Mount a switch at the centre of the operating range.

Adjust the mounting position of an auto switch so that the piston stops at the optimum operating position (at the centre of the operating range where the green LED lights up). (The mounting positions shown in the catalogue indicate the optimum positions at stroke end.) If mounted at the end of the operating range (around the borderline of ON and OFF), operation may be unstable.

#### Wiring

## **△**Warning

## 1. Avoid repeatedly bending or stretching lead

Broken lead wires will result from repeatedly applying bending stress or stretching force to the lead wires.

## 2. Be sure to connect the load before power is

If the power is turned ON when an auto switch is not connected to a load, the switch will be instantly damaged because of excess current.

#### 3. Confirm proper insulation of wiring.

Be certain that there is no faulty wiring insulation (contact with other circuits, ground fault, improper insulation between terminals, etc.). Damage may occur due to excess current flow into a

## 4. Do not wire with power lines or high voltage

Wire separately from power lines or high voltage lines, avoiding parallel wiring or wiring in the same conduit with these lines. Control circuits containing auto switches may malfunction due to noise from these other lines.

#### 5. Avoid incorrect wiring.

The switch will not be damaged if protected by a protection circuit, but the switch will be in a normally ON state. However, note that the switch will be damaged if reversed connections are made while the load is in a short circuited condition.

#### \* Lead wire colour changes

Lead wire colours of SMC auto 2 wire switches have been changed in order to meet NECA Standard 0402 for production beginning September, 1996 and thereafter. Please refer to the table provided.

Special care should be taken regarding wire polarity during the time that the old colours still coexist with the new colours.

	Old	New
Output (+)	Red	Brown
Output (–)	Black	Blue







## Stainless Steel Cylinder Water Posistant

## **Water Resistant Auto Switch Precautions 3**

Be sure to read before handling.

### **Operating Environment**

## **△**Warning

1. Never use in an atmosphere of explosive gases.

The structure of auto switches is not intended to prevent explosion. Never use in an atmosphere with an explosive gas since this may cause a serious explosion.

2. Do not use in an area where a magnetic field is generated.

Auto switches will malfunction or magnets inside cylinders will become demagnetized.

3. Operating in environments where the switch is constantly exposed to water (including various solvents and chemicals)

Water resistant auto switches can be operated in environments with constant water splashing. However, additives included in oil, cleaning solvent, and chemicals can cause adverse effects, such as swelling, melting, and drop in mechanical strength, to the internal insulation material (potting resin) and the external components of the switch.

4. Operating in environments with temperature cycles

When a liquid at a temperature that is different (use 20°C or more as a guide) from the ambient temperature repeatedly splashes on the switch, temperature cycles are repeatedly applied to the switch and may cause adverse effects to its internal components.

5. Do not use in an area where surges are generated.

When there are units (solenoid type lifter, high frequency induction furnace, motor, etc.) which generate a large amount of surge in the area around cylinders with solid state auto switches, this may cause deterioration or damage to internal circuit elements of the switch. Avoid sources of surge generation and disorganized lines.

6. Avoid accumulation of iron debris or close contact with magnetic substances.

When a large amount of ferrous debris such as machining chips or welding spatter is accumulated, or a magnetic substance (something attracted by a magnet) is brought into close proximity with an auto switch cylinder, it may cause auto switches to malfunction due to a loss of the magnetic force inside the cylinder.

#### **Maintenance**

## **△**Warning

- 1. Perform the following maintenance periodically in order to prevent possible danger due to unexpected auto switch malfunction.
  - 1) Securely tighten switch mounting screws.
    - If screws become loose or the mounting position is dislocated, retighten them after readjusting the mounting position.
  - 2) Confirm that there is no damage to lead wires.
    - To prevent faulty insulation, replace switches or repair lead wires, etc., if damage is discovered.
  - 3) Confirm the lighting of the green light on a 2 colour indicator type switch.

Confirm that the green LED is on when stopped at the established position. If the red LED is on, the mounting position is not appropriate. Readjust the mounting position until the green LED lights up.

#### Other

## **Marning**

 Consult SMC concerning water resistance, flexibility of lead wires and usage at welding sites, etc.







Austria

SMC Pneumatik GmbH (Austria). Girakstrasse 8, A-2100 Korneuburg Phone: 02262-62280, Fax: 02262-62285



Belgium

SMC Pneumatics N.V./S.A. Niiverheidsstraat 20. B-2160 Wommelgem Phone: 03-355-1464, Fax: 03-355-1466



Czech

SMC Czech.s.r.o. Kodanska 46, CZ-100 10 Prague 10 Phone: 02-67154 790, Fax: 02-67154 793



Denmark

Knudsminde 4B, DK-8300 Odder Phone: (45)70252900, Fax: (45)70252901



Estonia

Teknoma Eesti AS Mustamäe tee 5, EE-0006 Tallinn, Estonia Phone: 259530, Fax: 259531



Finland

SMC Pneumatiikka OY Veneentekijäntie 7, SF-00210 Helsinki Phone: 09-681021, Fax: 09-6810233



France

1, Boulevard de Strasbourg, Parc Gustave Eiffel

SMC Pneumatique, S.A.

Bussy Saint Georges F-77607 Marne La Vallee Cedex 3 Phone: 01-6476 1000, Fax: 01-6476 1010



Germany

SMC Pneumatik GmbH Boschring 13-15, D-63329 Egelsbach Phone: 06103-4020, Fax: 06103-402139



Greece

S. Parianopoulus S.A 9, Konstantinoupoleos Street, GR-11855 Athens Phone: 01-3426076. Fax: 01-3455578



Hungary

SMC Hungary Kft. Budafoki ut 107-113, 1117 Budapest Phone: 01-204 4366, Fax: 01-204 4371



Ireland

SMC Pneumatics (Ireland) Ltd. 2002 Citywest Business Campus, Naas Road, Saggart, Co. Dublin Phone: 01-403 9000, Fax: 01-464 0500



SMC Italia S.p.A

Via Garibaldi 62, I-20061 Carugate, (Milano) Phone: 02-92711. Fax: 02-92150394



Latvia

Ottensten Latvia SIA Ciekurkalna Prima Gara Linija 11, LV-1026 Riga, Latvia Phone: 371-23-68625, Fax: 371-75-56748



Lithuania

UAB Ottensten Lietuva Savanoriu pr. 180, LT-2600 Vilnius, Lithuania Phone/Fax: 370-2651602



Netherlands

SMC Pneumatics BV Postbus 308, 1000 AH Amsterdam Phone: 020-5318888, Fax: 020-5318880



Norway

SMC Pneumatics Norway AS Vollsveien 13 C, Granfoss Næringspark N-1324 Lysaker Tel: (47) 67 12 90 20, Fax: (47) 67 12 90 21



Poland

Semac Co., Ltd. PL-05-075 Wesola k/Warszaway, ul. Wspolna 1A Phone: 022-6131847, Fax: 022-613-3028



Portugal

SMC España (Sucursal Portugal), S.A. Rua de Engº Ferreira Dias 452, 4100 Porto Phone: 02-610-89-22. Fax: 02-610-89-36



Romania

SMC Romania srl Vasile Stroescu 19, Sector 2, Bucharest Phone: 01-210-1354 . Fax: 01-210-1680



Russia

36/40 Sredny pr. St. Petersburg 199004 Phone.:(812) 118 5445, Fax:(812) 118 5449







Slovakia

SMC Slovakia s.r.o. Pribinova ul. C. 25, 819 02 Bratislava Phone: 0-563 3548, Fax: 07-563 3551



Slovenia

SMC Slovenia d.o.o. Grajski trg 15, 8360 Zuzemberk Phone: 068-88 044 Fax: 068-88 041



Spain

SMC España, S.A. Zuazobidea 14, Pol. Ind. Jundiz, E-01015 Vitoria



Sweden

Phone: 945-184 100, Fax: 945-184 124

SMC Pneumatics Sweden A.B. Ekhagsvägen 29-31, S-14105 Huddinge Phone: 08-603 07 00, Fax: 08-603 07 10



Switzerland

SMC Pneumatik AG Dorfstrasse 7, CH-8484 Weisslinger Phone: 052-396-3131, Fax: 052-396-3191



Turkey

Entek Pnömatik San. ve Tic Ltd. Sti. Perpa Tic. Merkezi Kat: 11 No: 1625, TR-80270 Okmeydani Istanbul Phone: 0212-221-1512, Fax: 0212-220-2381



SMC Pneumatics (UK) Ltd Vincent Avenue, Crownhill, Milton Keynes, MK8 0AN Phone: 01908-563888 Fax: 01908-561185





### **OTHER SUBSIDIARIES WORLDWIDE:**

ARGENTINA, AUSTRALIA, BOLIVIA, BRASIL, CANADA, CHILE, CHINA, HONG KONG, INDIA, MALAYSIA, MEXICO, NEW ZEALAND, PHILIPPINES, SINGAPORE, SOUTH KOREA, TAIWAN, THAILAND, USA, VENEZUELA

## **SMC UK Contact Numbers**

Head Office: SMC Pneumatics (UK) Ltd, Vincent Avenue, Crownhill, Milton Keynes MK8 0AN

#### THE NATIONAL SALES CENTRE FOR ENGLAND & WALES Internal Sales

(Price, Delivery Information & Order Placement)

Freephone: 0800 138 2930 Fax: 01908 555064 e-mail:sales@smcpneumatics.co.uk

**Customer Services** (Post-Order Resolution)

Freephone: 0800 138 2931 Fax: 01908 555065 e-mail: customerservice@smcpneumatics.co.uk

#### **TECHNICAL CENTRE**

Freephone: 0800 138 2932 Fax: 01908 555066 e-mail: technical@smcpneumatics.co.uk

> **SMC FAST RESPONSE** (Literature & Catalogue Requests) 0800 0262006

### **SMC SALES CENTRE FOR SCOTLAND & N. IRELAND**

Tel: 01236 781133 Fax: 01236 780611

SMC Pneumatics (UK) Ltd, 1 Carradale Crescent, Broadwood Business Park, Cumbernauld, Glasgow G69 9LE

#### **SMC UK Sales Partners**

Birmingham JAMES LISTER Tel: 0121 5803800

Blackburn BLACKBURN PNEUMATIC SYSTEMS LTD Tel: 01254 682232 Fax: 01254 682224

Bristol APPLIED AUTOMATION Tel: 0117 9827769 Fax: 0117 9235522

Bury St Edmunds PNEUMATIC LINES Tel: 01284 706239 Fax: 01284 761218

Cardiff WALES FLUID POWER Tel: 02920 494551 Fax: 02920 481955

Plymouth APPLIED AUTOMATION Tel: 01752 343300 Fax: 01752 341161