

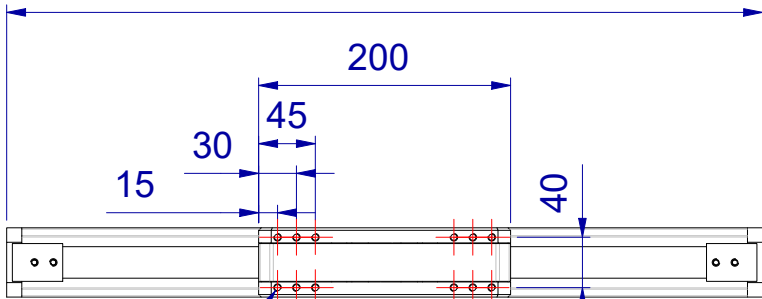



$$L = \text{Stroke} + 350$$

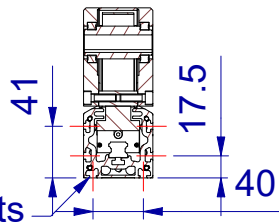

M6x1

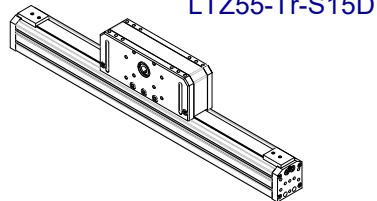


T-slots for M5 nuts

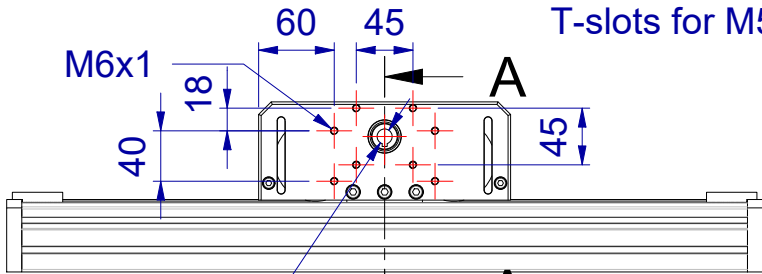

M6x1

Ø12 Hollow shaft
with keyway

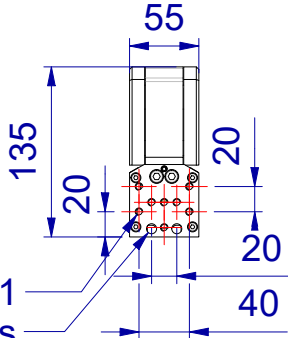

M6x1

Ø8 for cables