



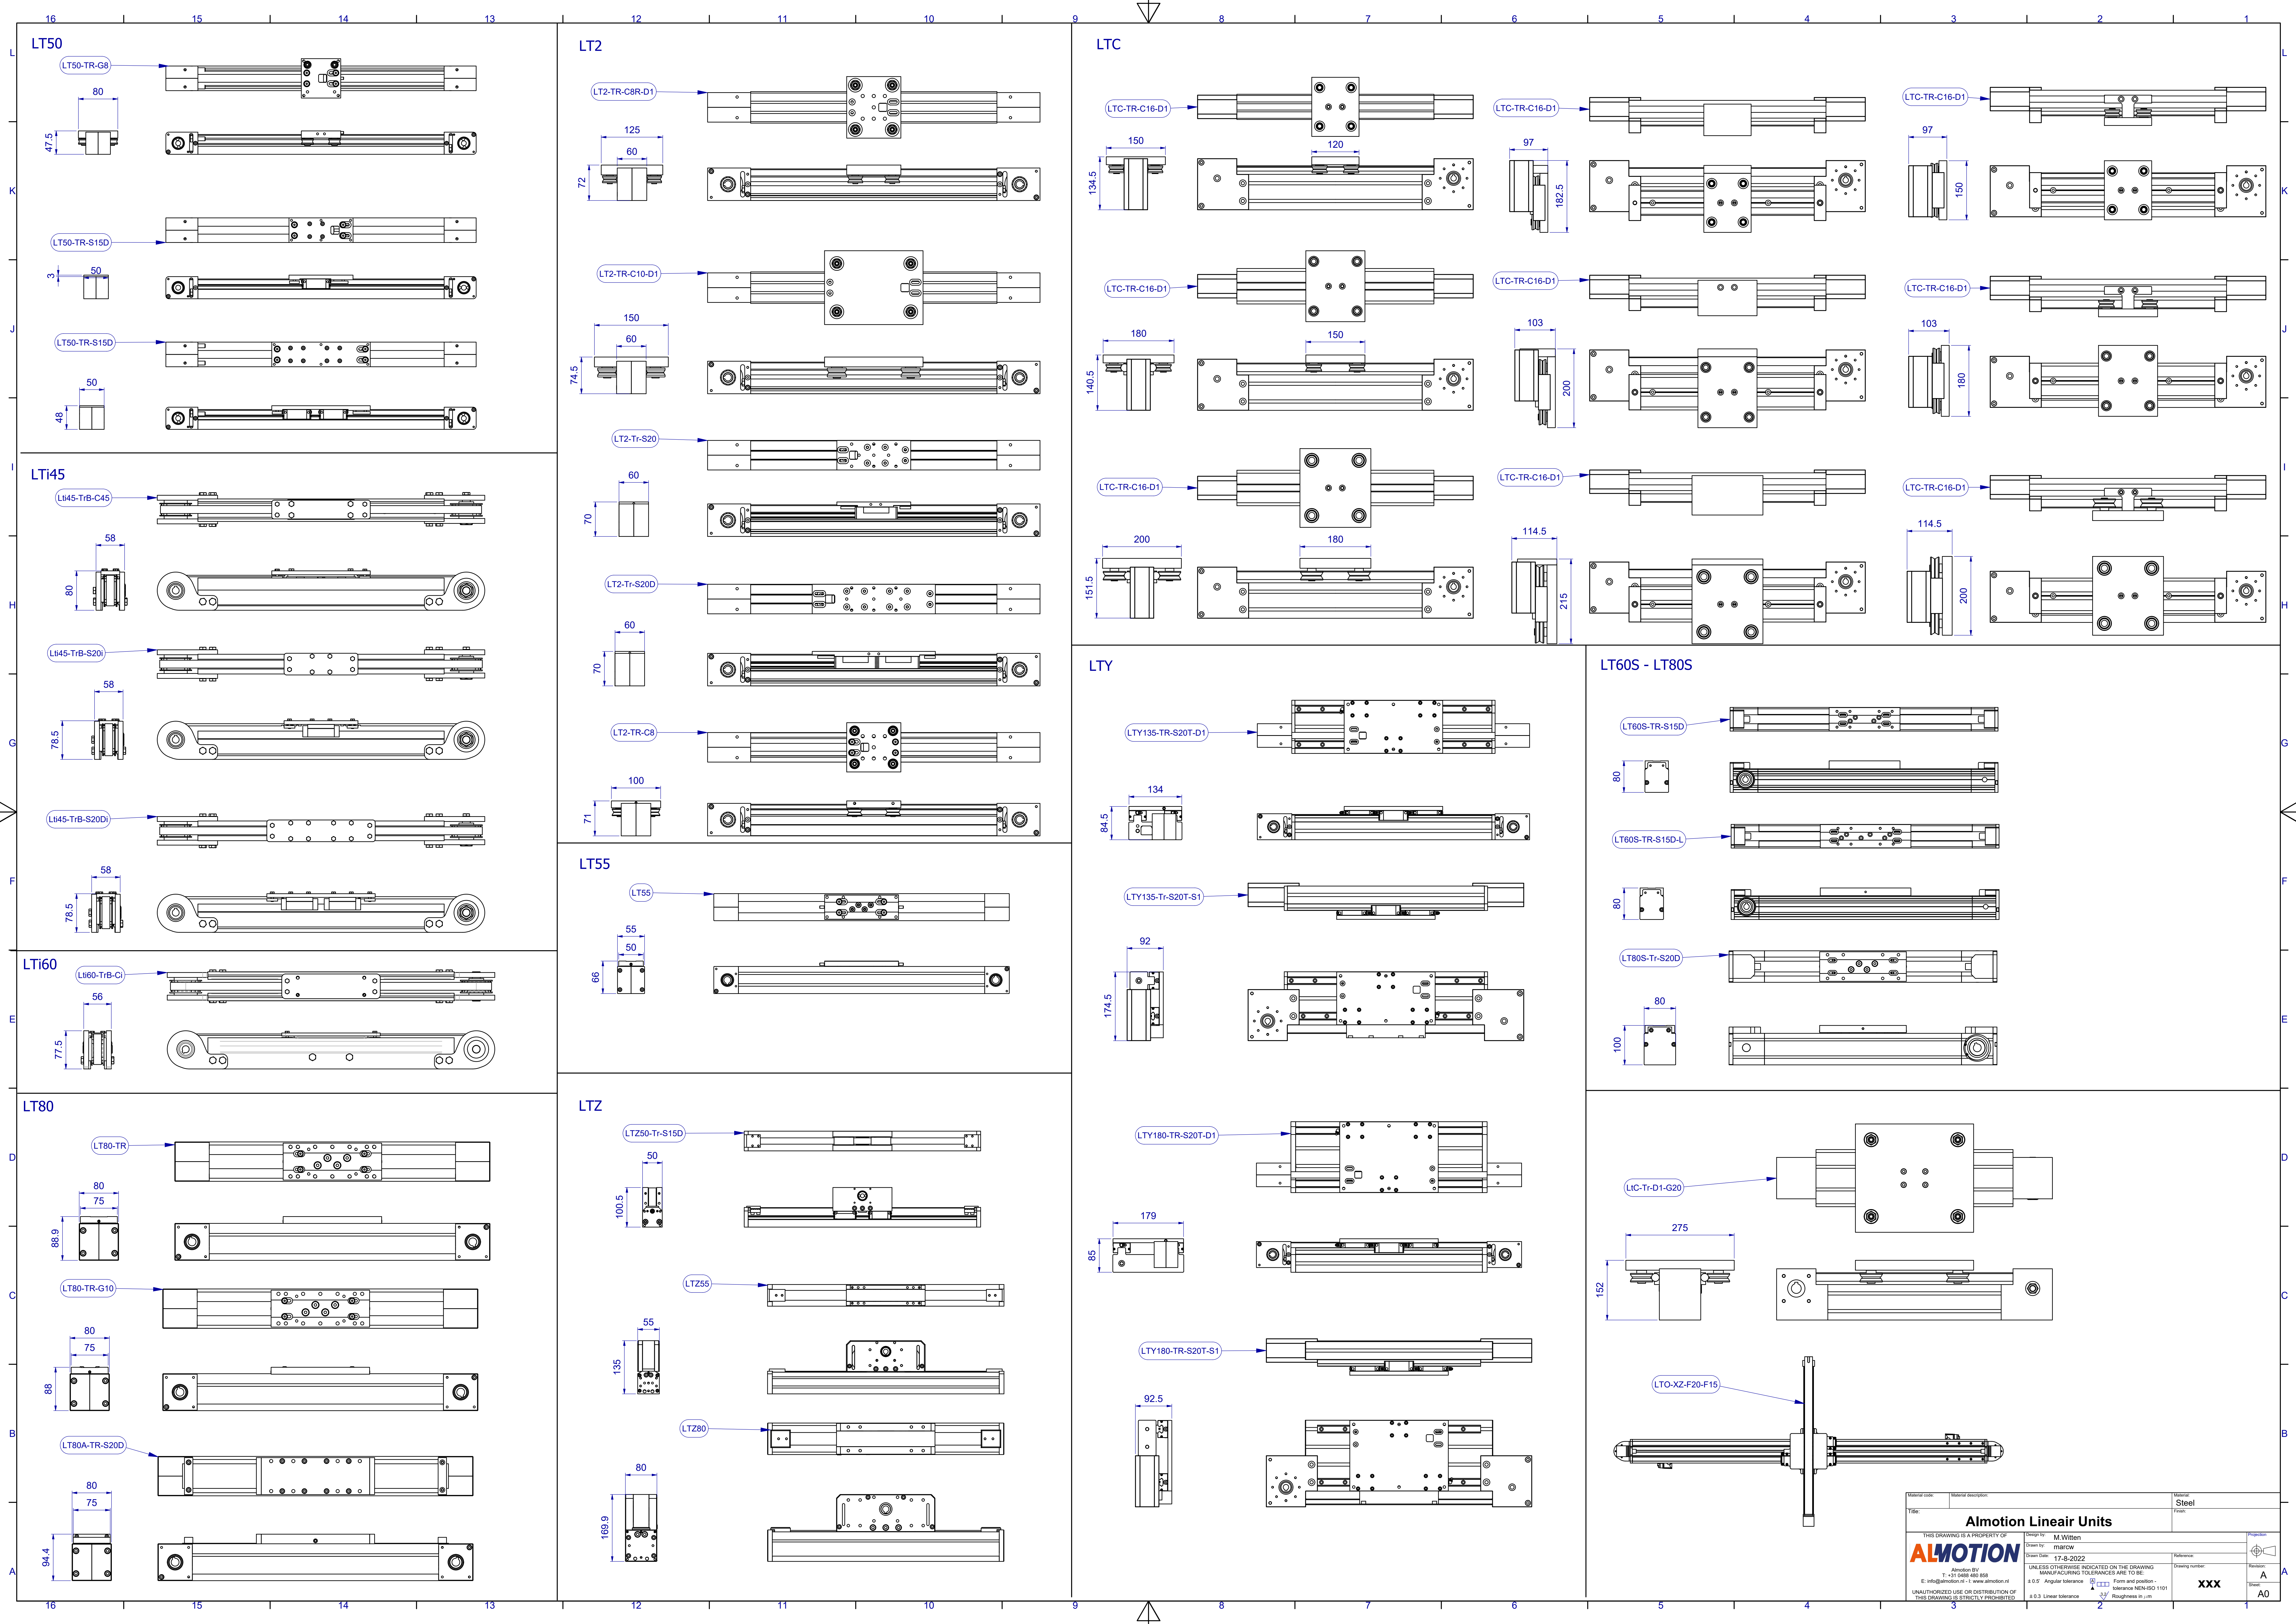
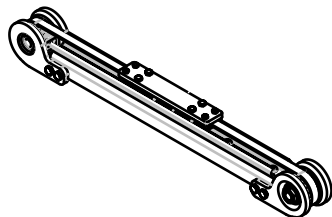



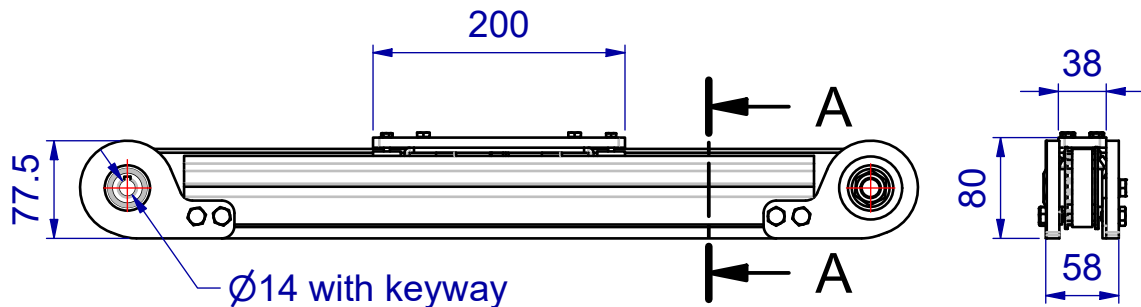



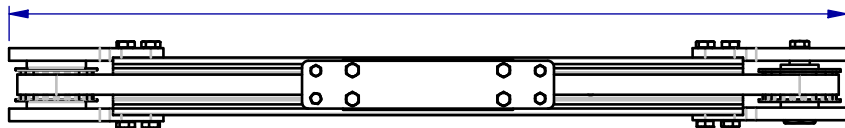




$$L = \text{Stroke} + 365$$

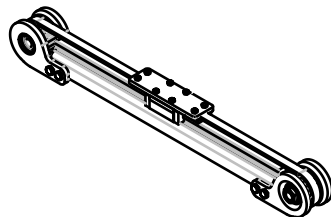







$$L = \text{Stroke} + 315$$

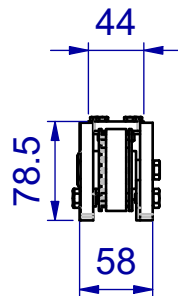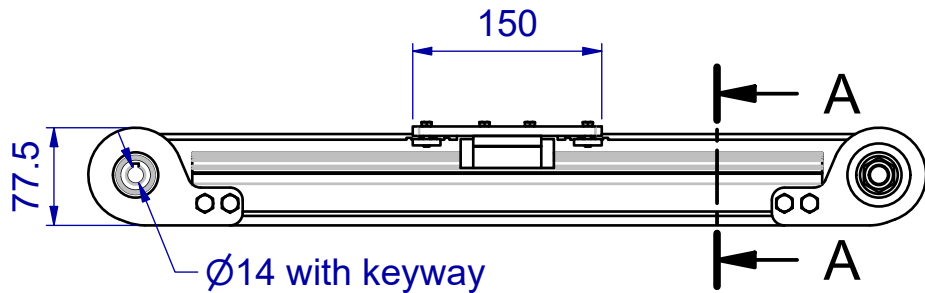
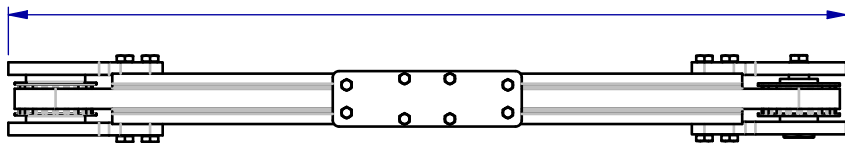


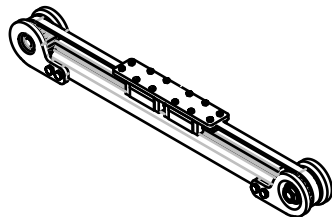


$$L = \text{Stroke} + 385$$

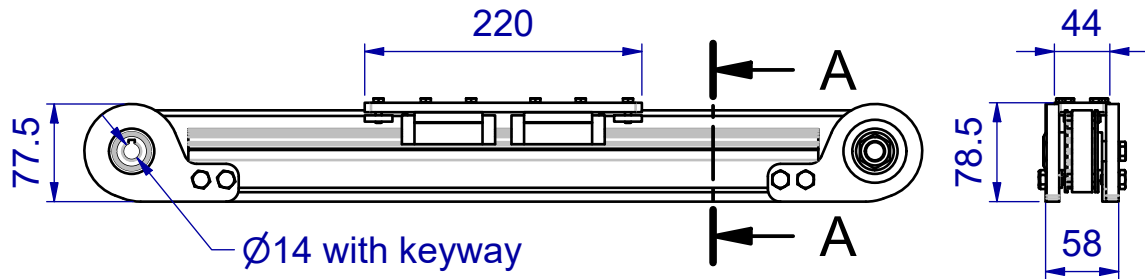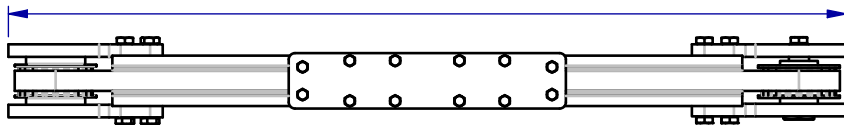


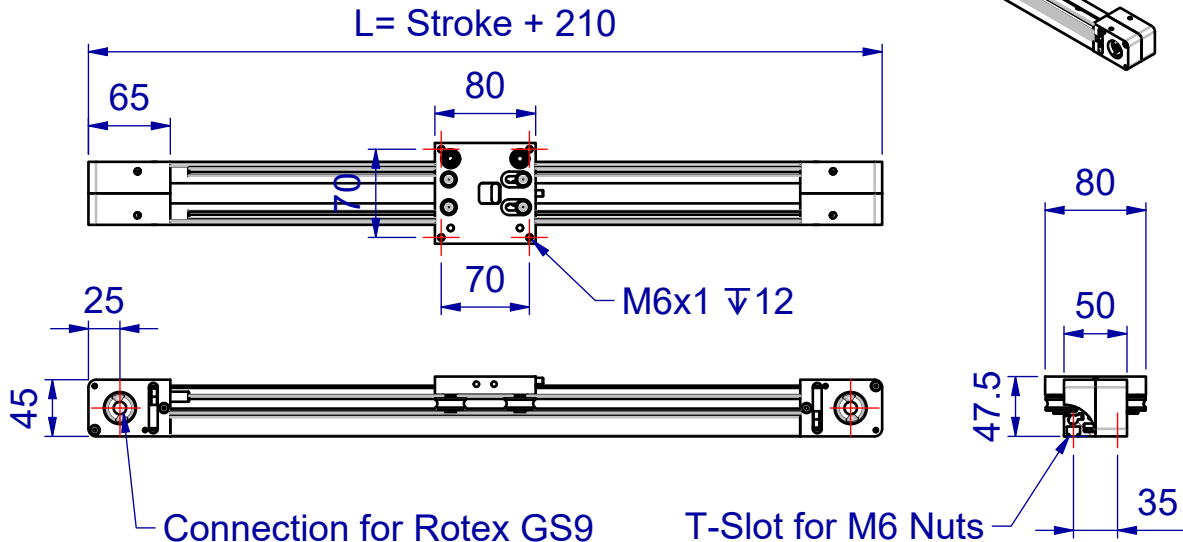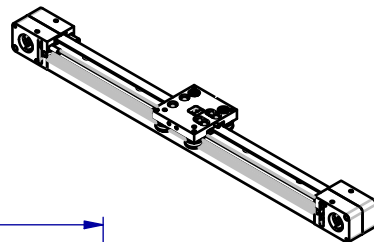



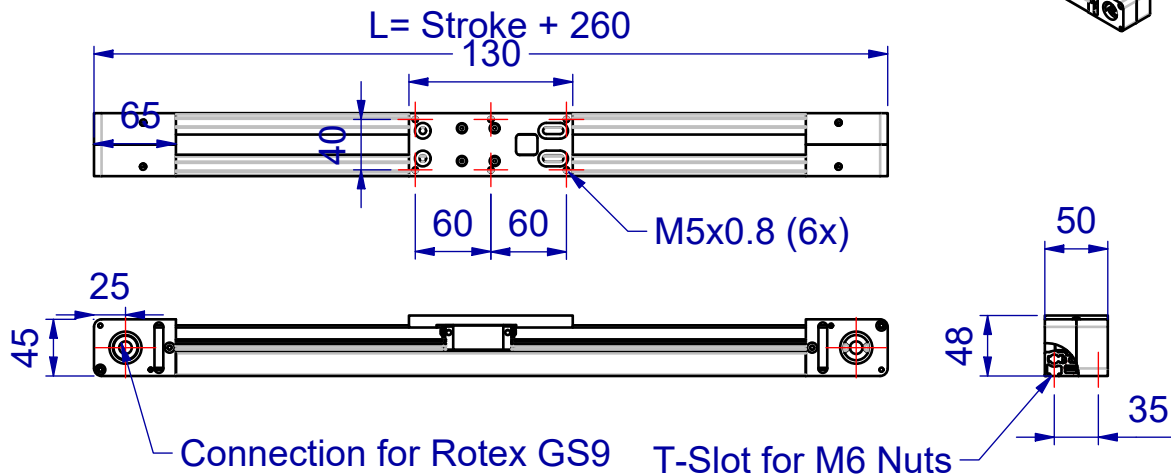
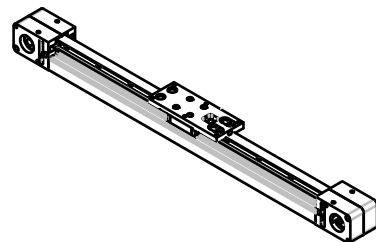


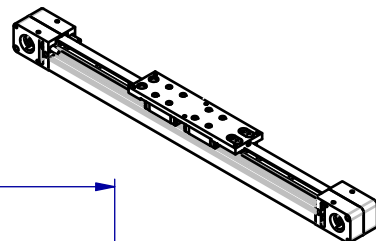

$$L = \text{Stroke} + 330$$

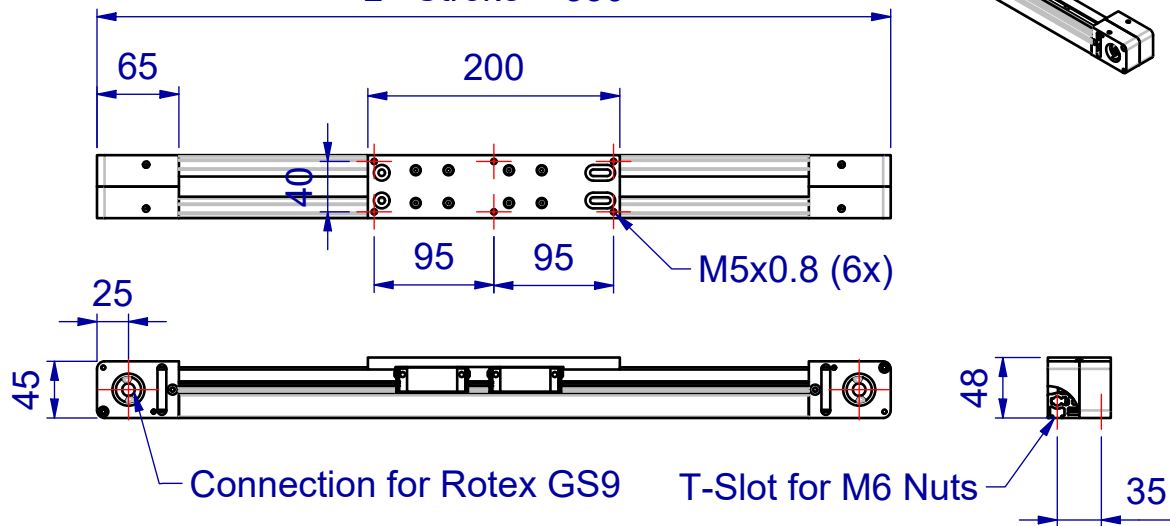


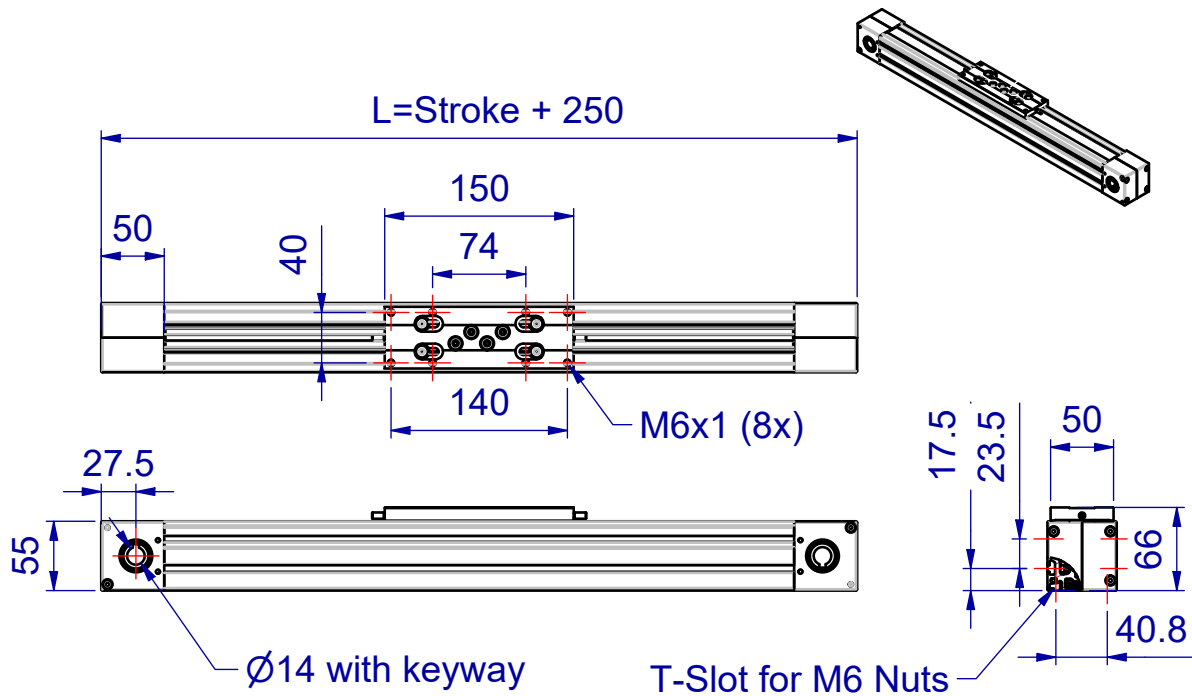


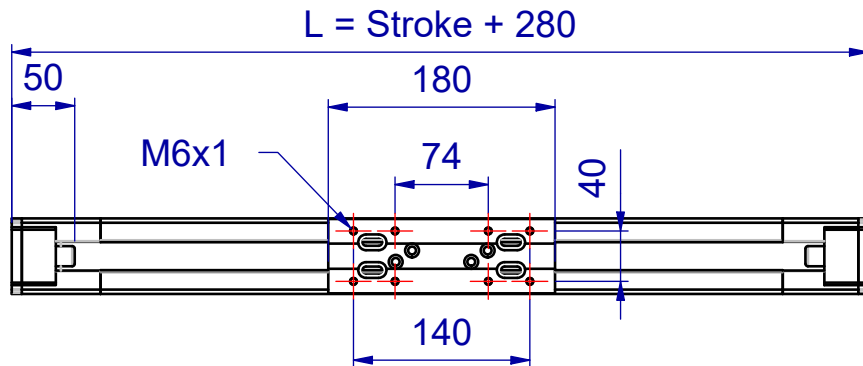
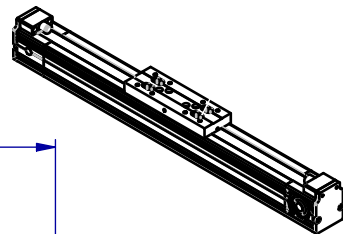


Ø14 with keyway

T-Slots for M5 nuts


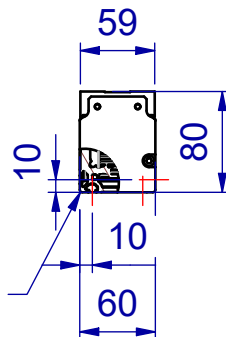


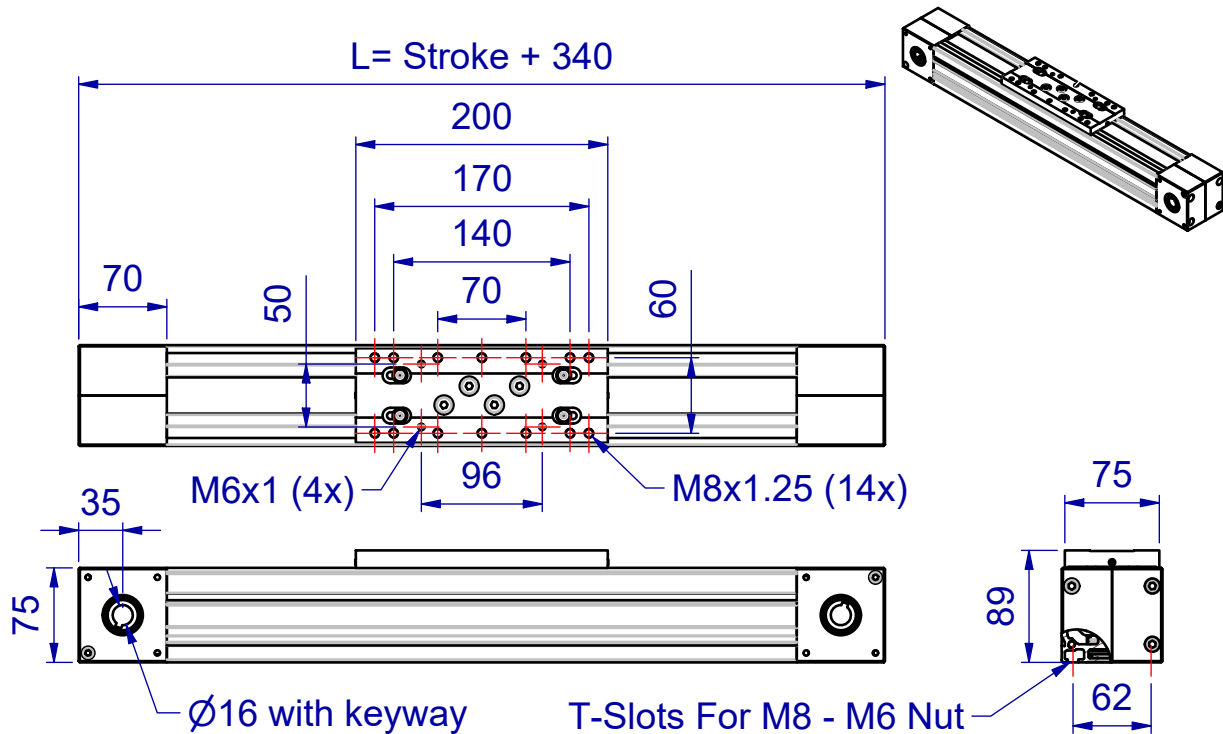


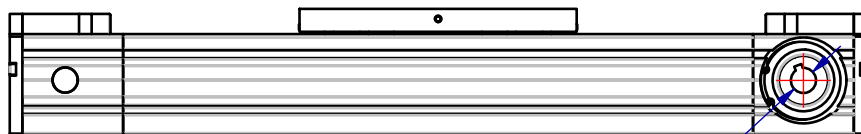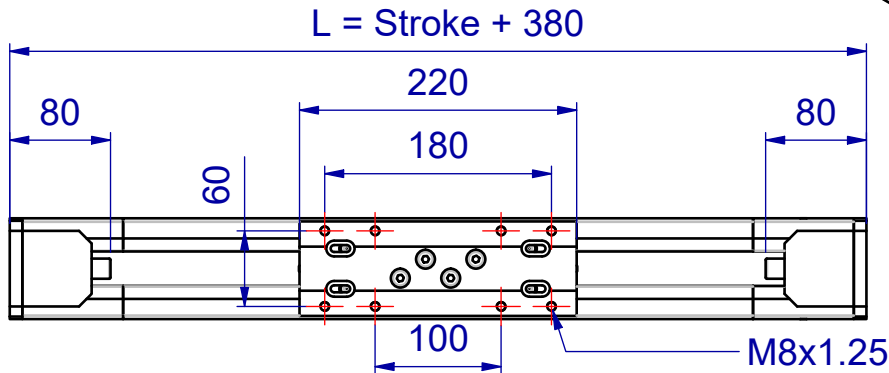


Ø20 Hollow shaft with keyway

T-slot for M6 Nuts

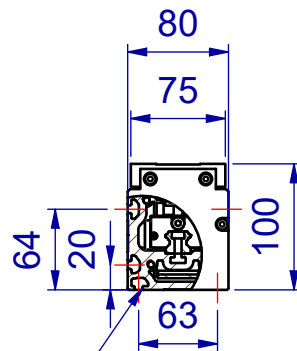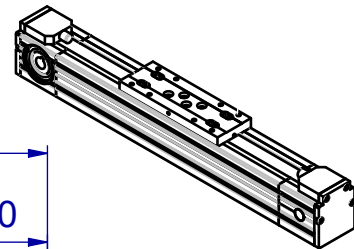


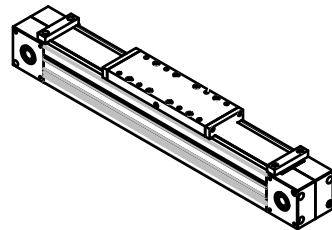


$$L = \text{Stroke} + 340$$

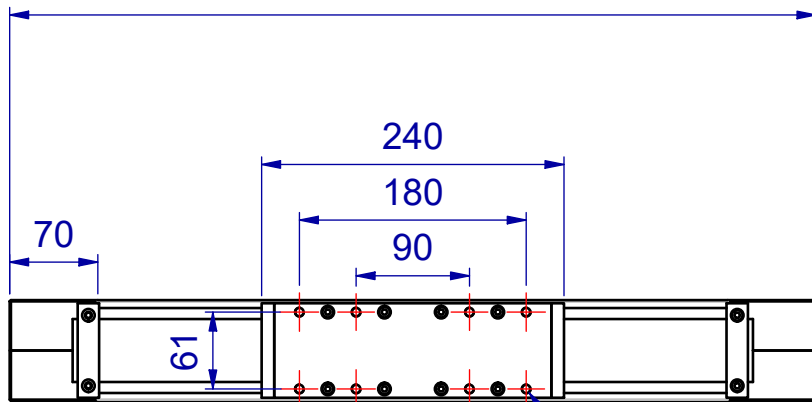


M8 (8x)

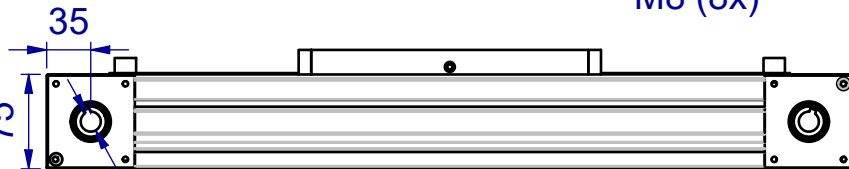




Ø16 with keyway

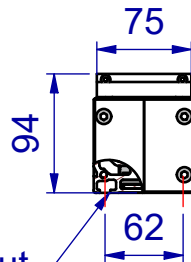


T-slots For M8 - M6 Nut

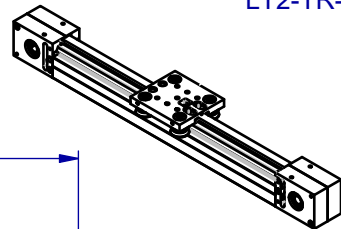



$$L = \text{Stroke} + 285$$

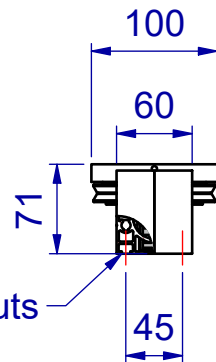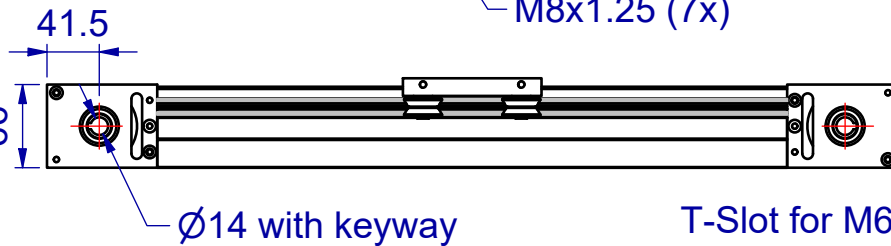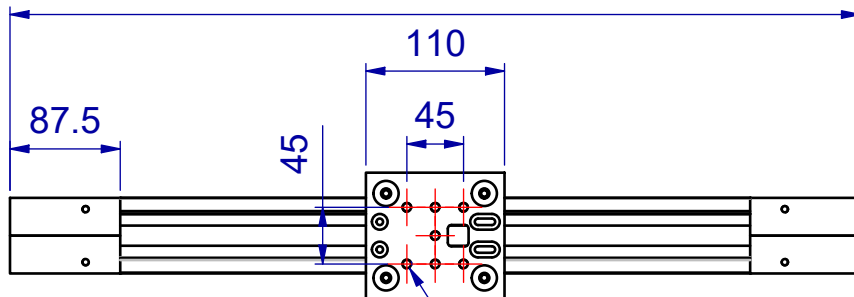


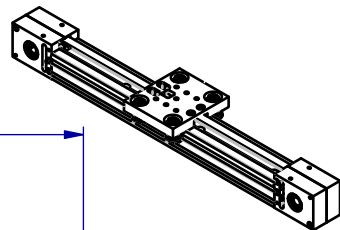


$$L = \text{Stroke} + 375$$

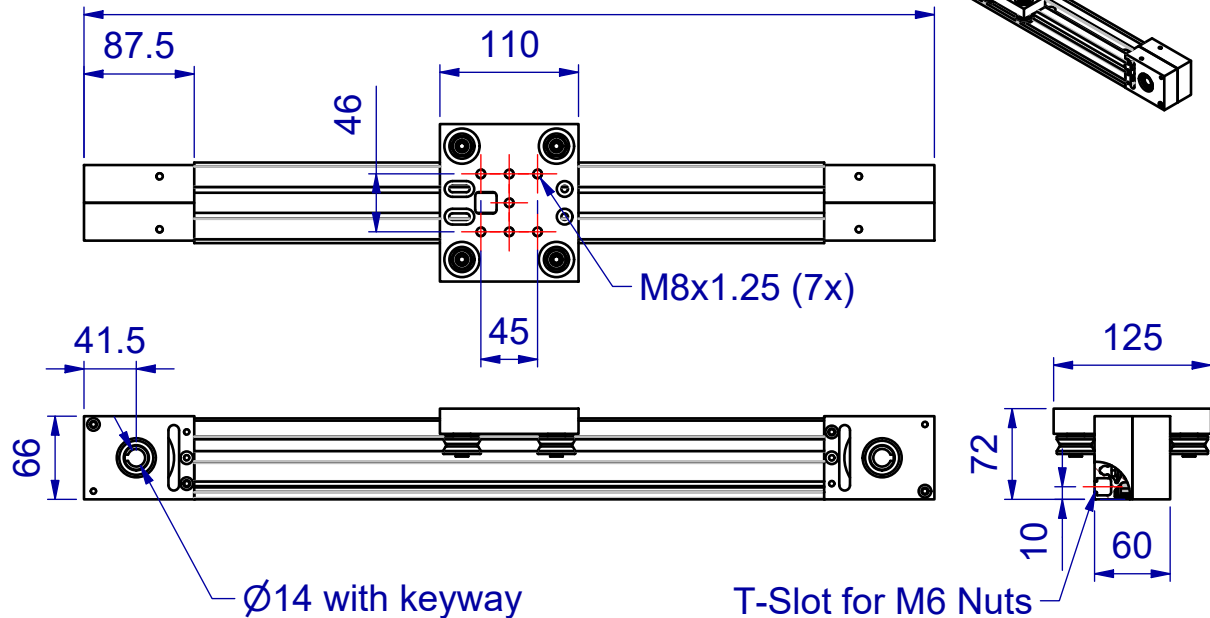


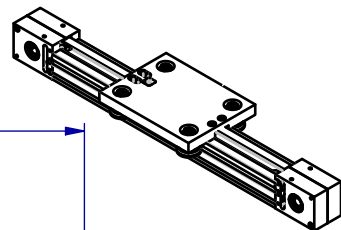




$$L = \text{Stroke} + 375$$

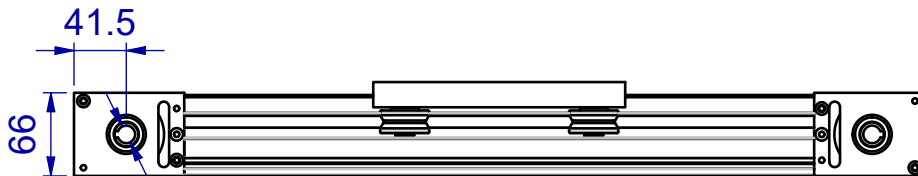
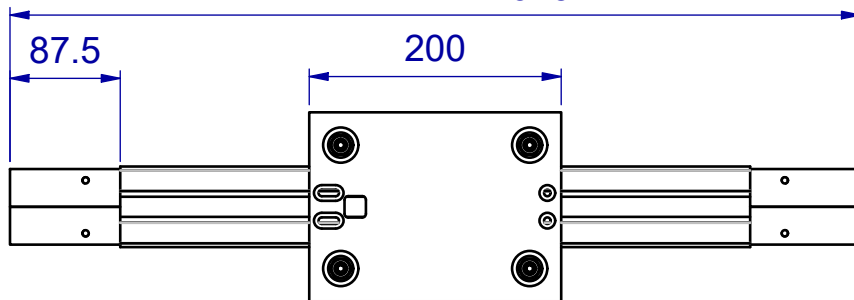


Ø14 with keyway


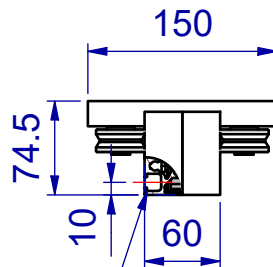






T-Slot for M8 Nuts


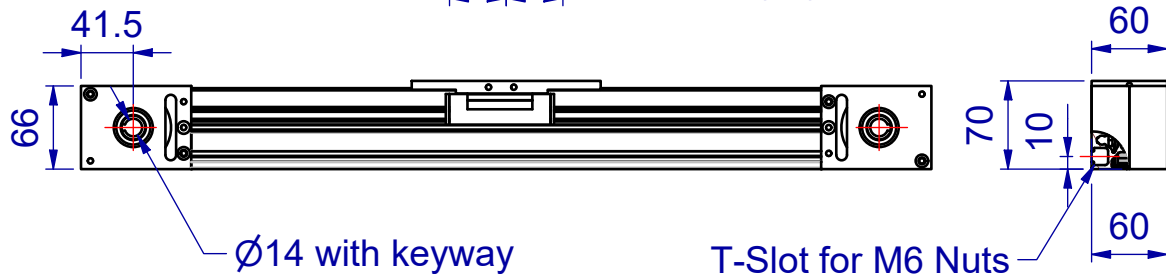
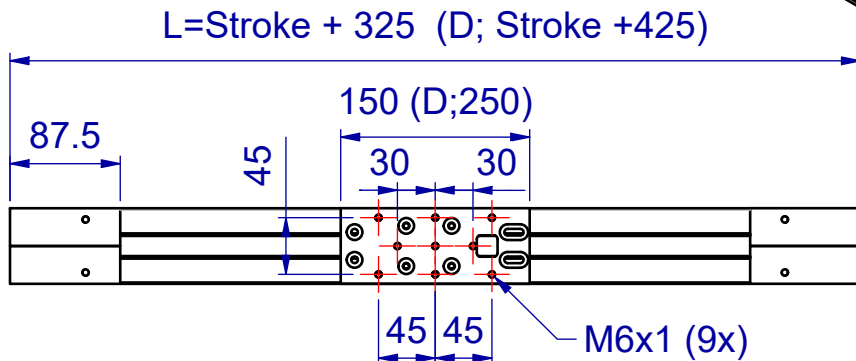
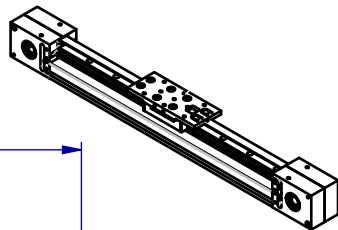


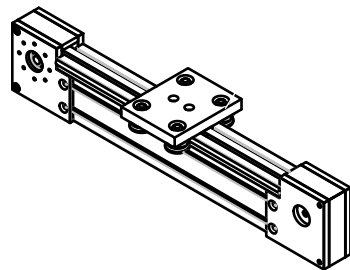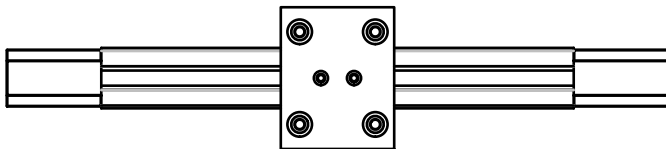

$$L = \text{Stroke} + E$$


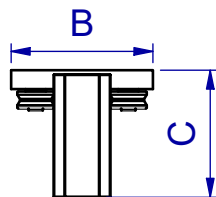
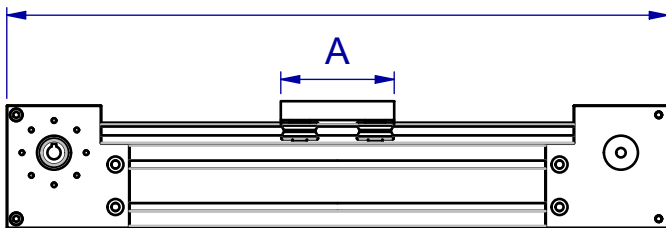


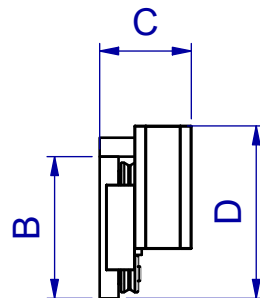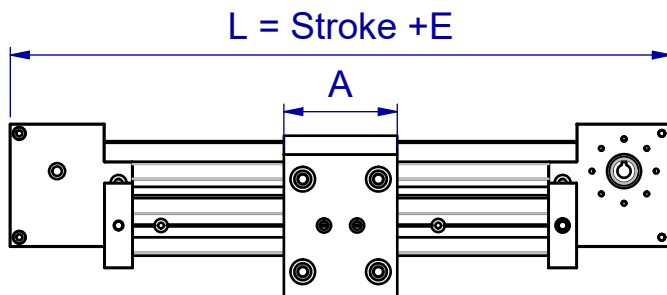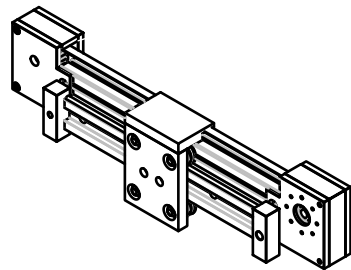

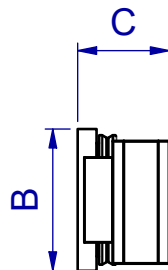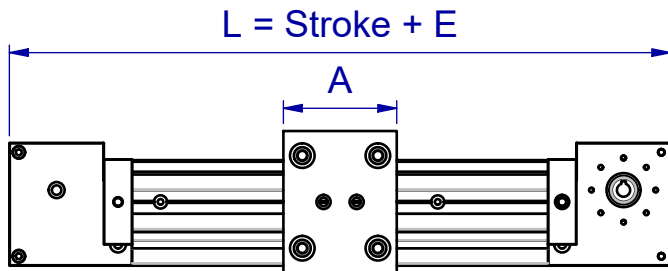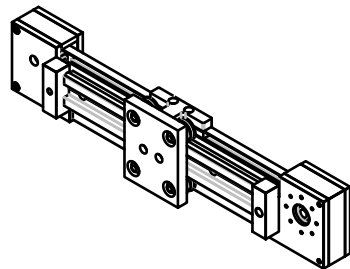

$$L = \text{Stroke} + 250$$

150

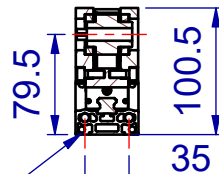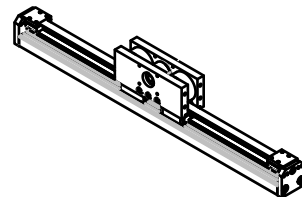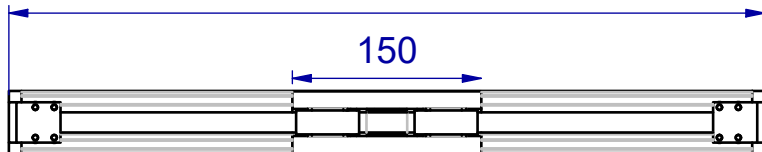


T-slot for M5


40


M4x0.7 (4x)




35

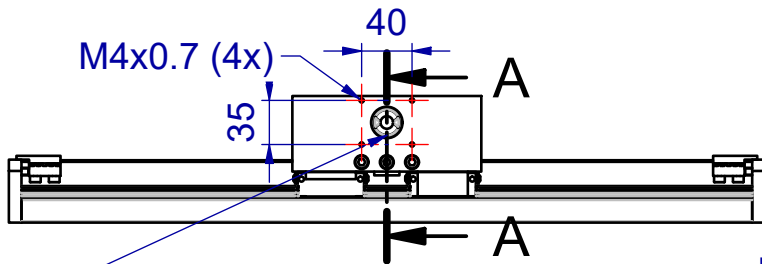

Connection for Rotex GS9

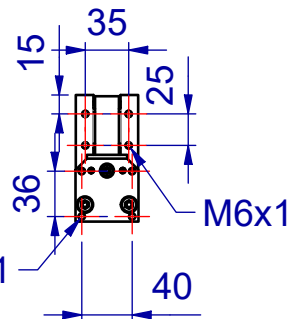

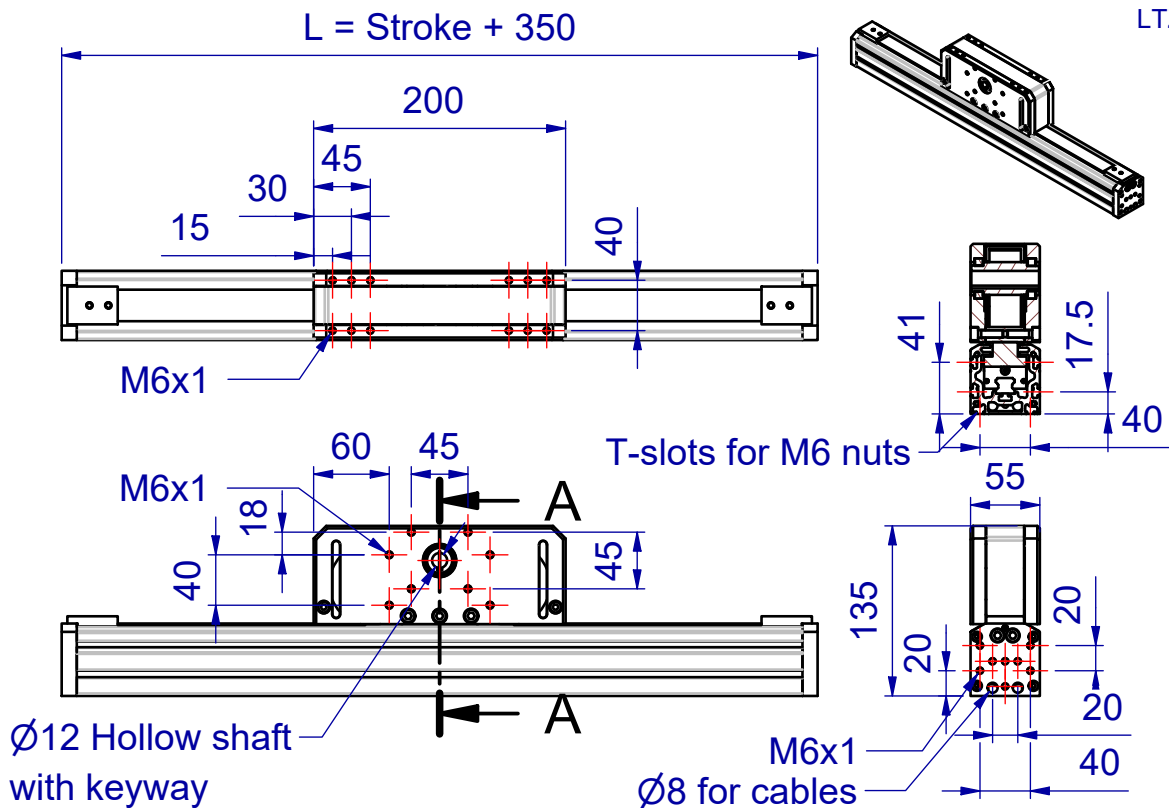

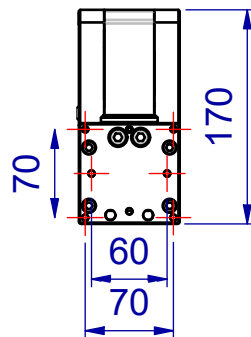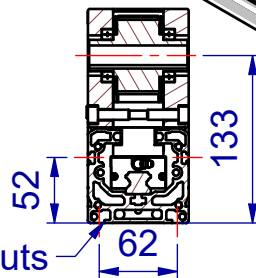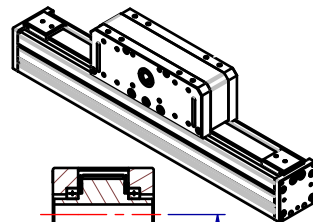

$$600L = \text{Stroke} + 400$$

250

60

30

M8x1.25

30

60

T-slots for M8-M6 Nuts

A

M8x1.25

30

30


65


60

15



Ø16 Hollow shaft
with keyway

A

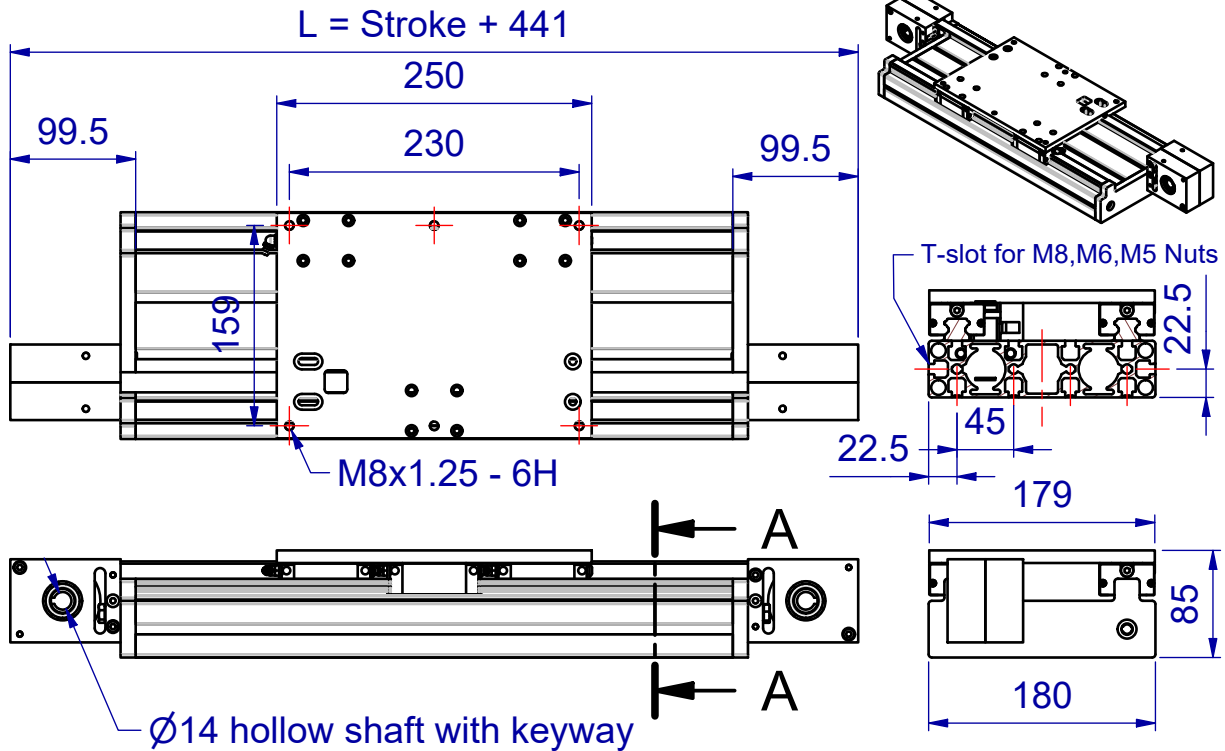




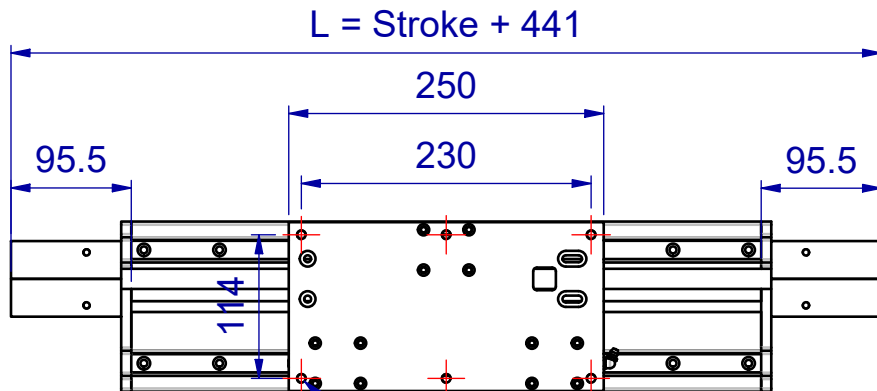





M8x1.25 (6x)

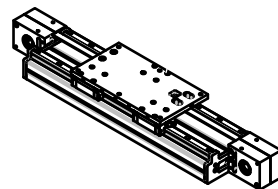
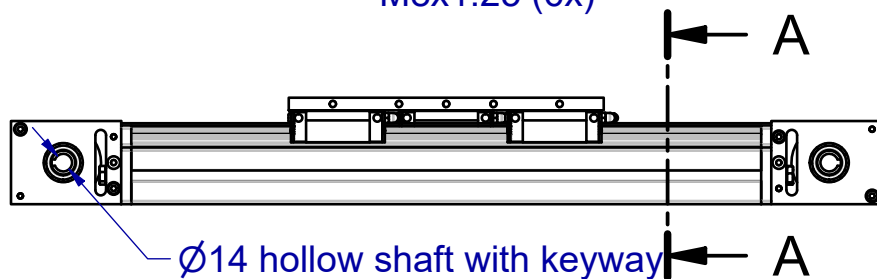


T-slot for M8,M6,M5 Nuts



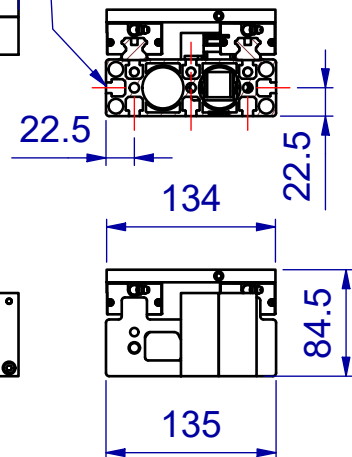


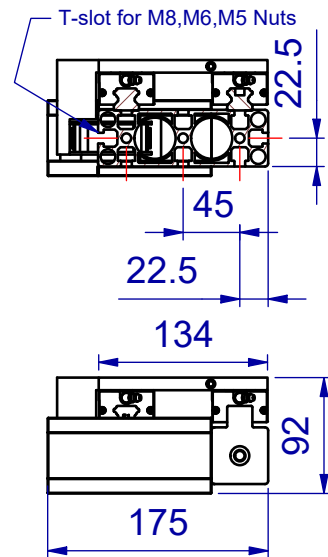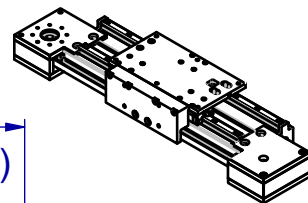
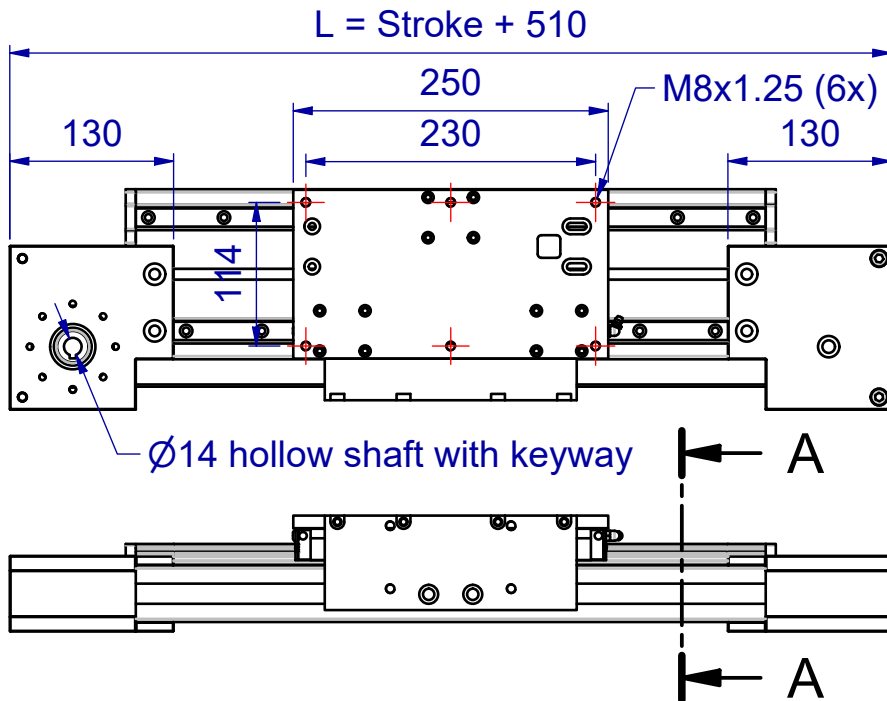


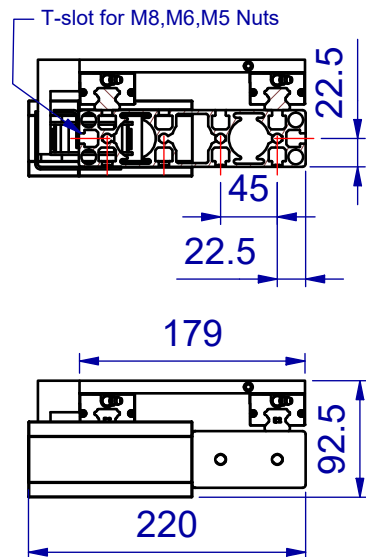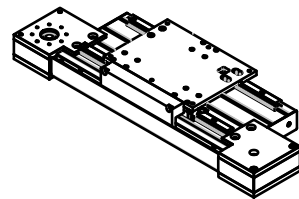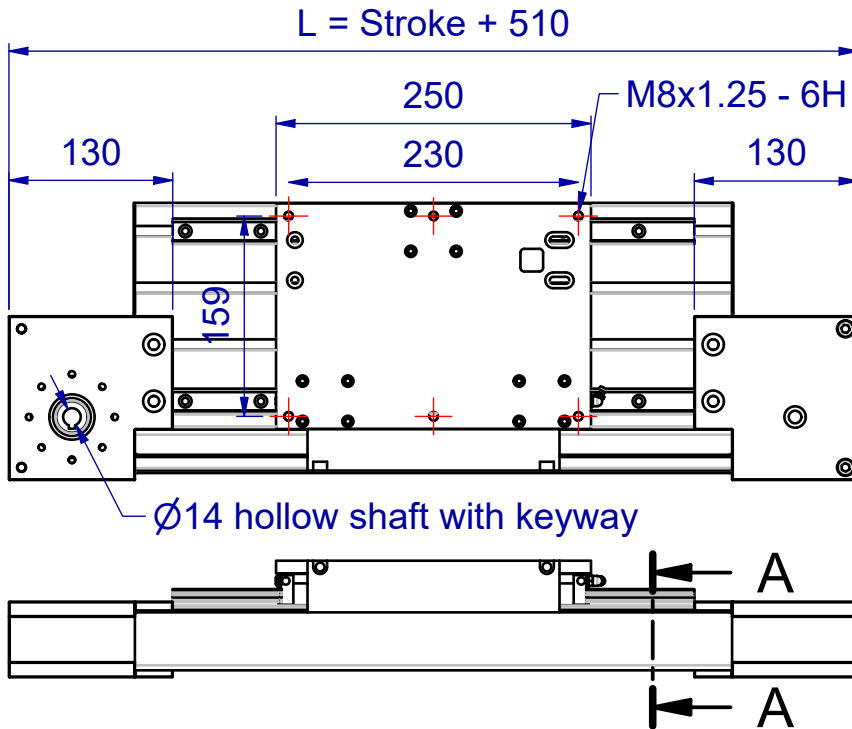

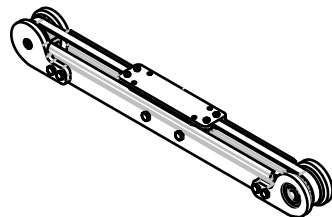

$$L = \text{Stroke} + 337$$

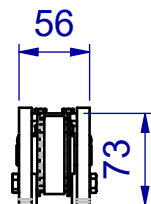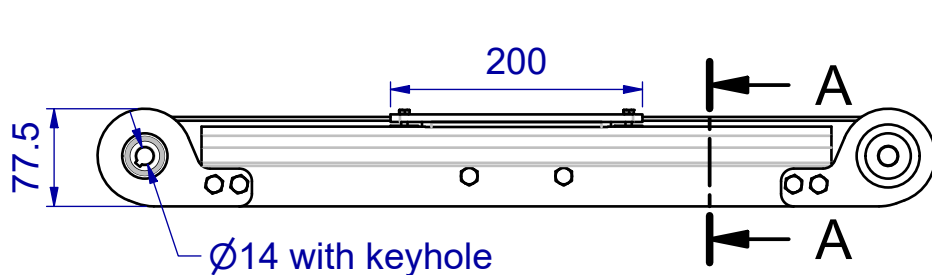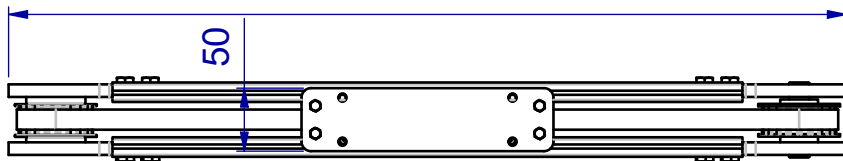

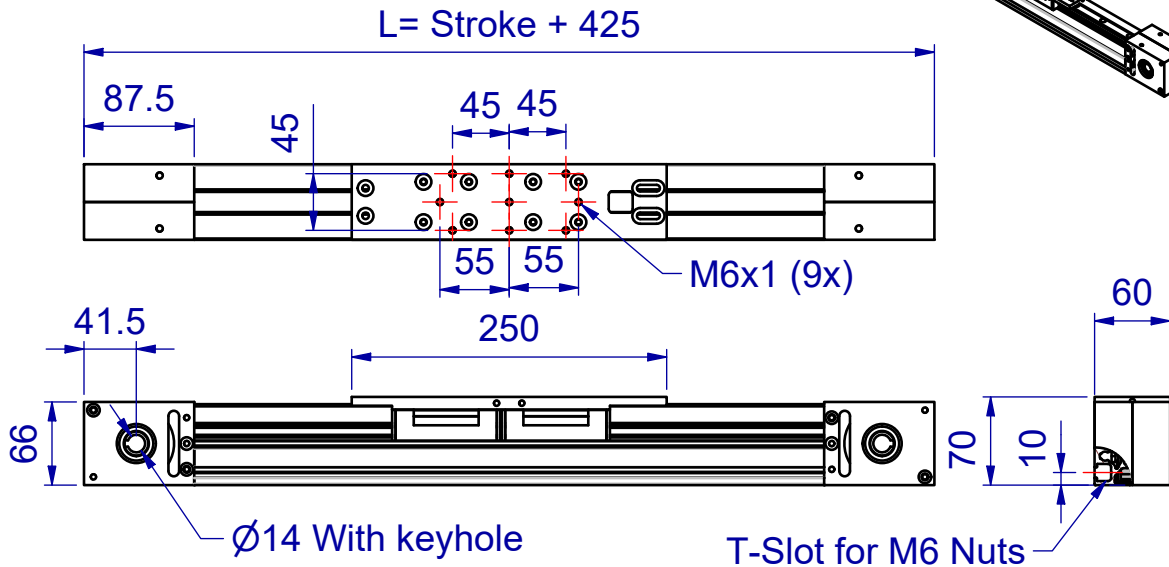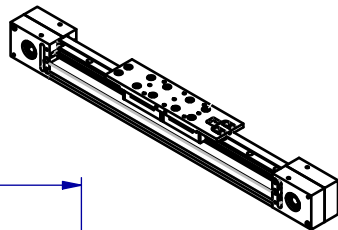


$$L = \text{Stroke} + 425$$


M6x1 (9x)

Ø14 With keyhole

T-Slot for M6 Nuts

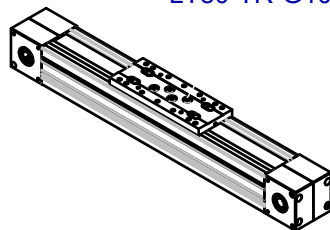


$$L = \text{Stroke} + 340$$

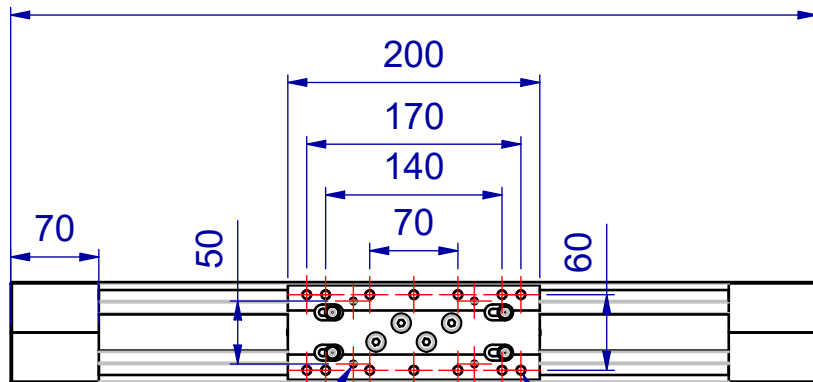


M6x1 (4x)

M8x1.25 (14x)

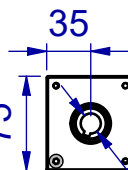




Ø16 with keyhole





T-Slots for M8-M6 Nut


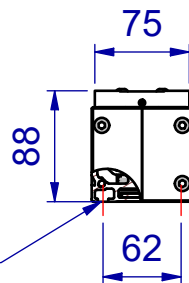


$L = \text{Stroke} + 340$

LTY200

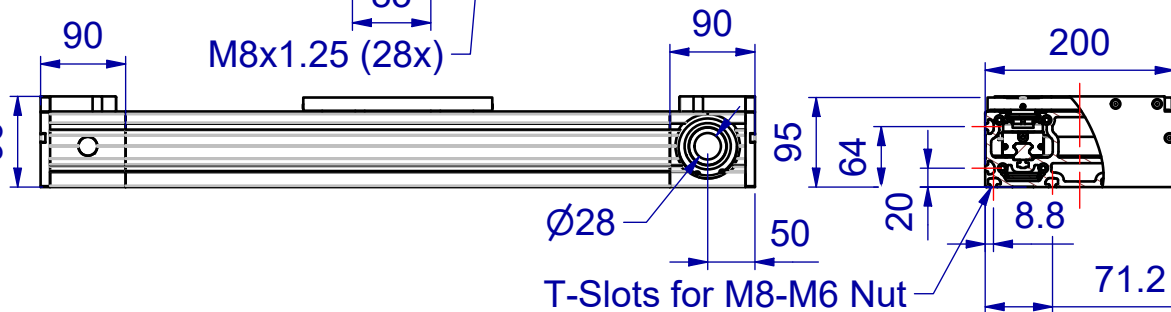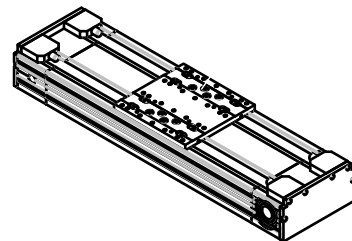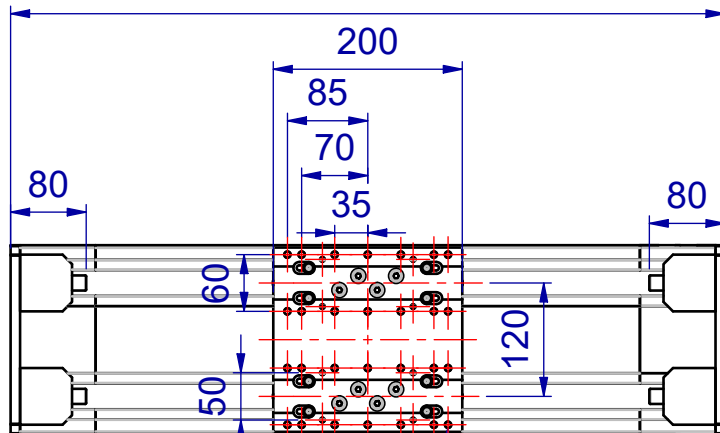

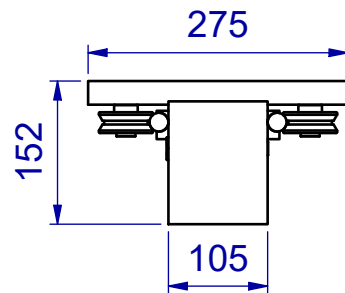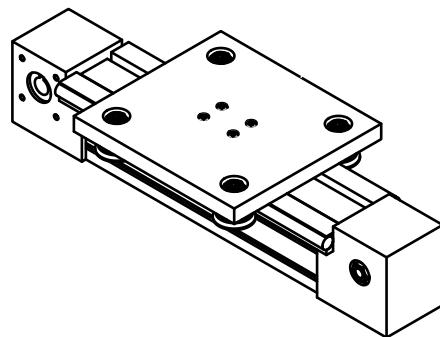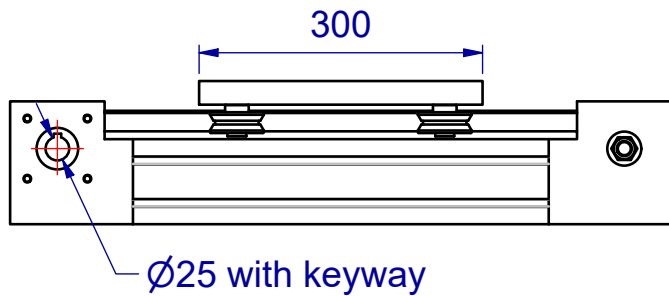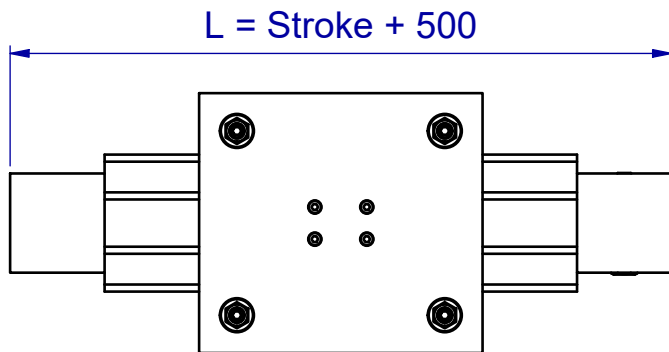

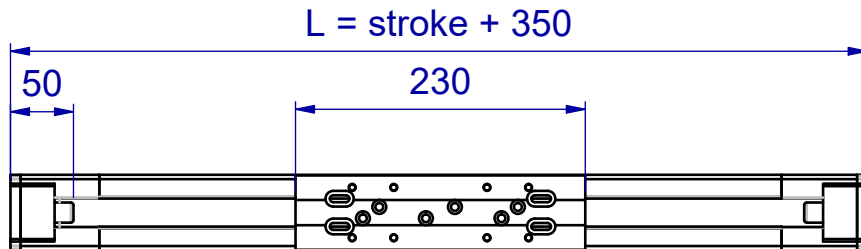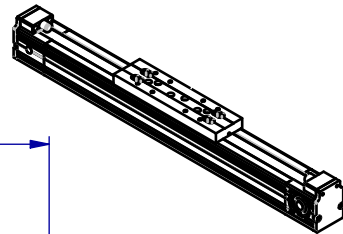

Ø14 with keyway

T-Slots for M5 nuts

